

WIRE ROUTING AND COMPONENT LOCATION **ELECTRICAL WIRING DIAGRAMS SJ SERIES**

ALPHABETICAL INDEX

Name	Wiring Diagram Sheet Number	Name	Wiring Diagram Sheet Number
ACC Fuse	3,15	Cavity D1	14
ACC LPS Fuse	1,16,28	Cavity D2	13,55
A/C Blower Motor	31	Cavity D4	2,6
A/C Blower Resistor	32	Cavity D5	28
A/C Clutch	31	Cavity E1	14,16
A/C Control Module	31	Cavity E4	1,15
A/C Heater System	31,32	Cavity E5	32
A/C Blower Motor	31	Cavity F1	21
A/C Blower Resistor	32	Cavity F2	28
A/C Clutch	31	Cavity F3	28
A/C Control Module	31	Cavity F4	19,20
A/C Low Pressure Switch	31	Cavity F5	19,20
A/C Mode Switch	31	Cavity F6	10
A/C Thermistor	32	Cavity G1	46
Blower Switch	32	Cavity G2	45
Blower Switch Mode Relay	31	Cavity G3	55
Heater Blower Motor	32	Cavity G4	2
Heater Blower Motor Resistor	32	Cavity G5	32
Temperature Sensor	31	Cavity G6	32
A/C Low Pressure Switch	31	Cavity H1	45
A/C Mode Switch	31	Cavity H2	45
A/C Temperature Sensor	31	Cavity H3	27,42,55
A/C Thermistor	32	Cavity H4	9
Alternator	4	Cavity H5	15,19,20
Ashtay Lamp	16	Cavity H6	44
Automatic Transmission Neutral Start	5	Carb Bowl Vent Solenoid	8
Backup Lamp Switch	46	Carb Solenoid	8
Battery	5	Cargo Lamp	24
Blower Switch	32	Cargo Lamp Switch	24
Blower Switch Mode Relay	31	Charging System	4
Brake Warning Gauge	26	Alternator	4
Brake Warning Switch	44	Chime Module	27
Bulkhead Connector	51,52,53	Circuit Breakers	
Cavity A1	14	Power Accessory	2,3,22,30,33,38,39,41
Cavity A2	13,55	Trailer Tow	47
Cavity A3	43	Windshield Wipe	3,19,20
Cavity A4	9	Cigar Lighter	17
Cavity A5	19,20	Clock	26
Cavity A6	5	Compass Module	28
Cavity A7	46	Coolant Temperature Gauge	26
Cavity B1	15,27	Courtesy Lamps	23
Cavity B2	17	Cruise Control System	11,12
Cavity B3	44	Cruise Control Module	11,12
Cavity B4	2,6,43	Cruise Control Servo	12
Cavity B5	31	In-Line Fuse	11
Cavity B6	2,6	Multi-Function Switch	11
Cavity C1	13	Speed Sensor	12
Cavity C2	14	Stop Lamp Switch	11
Cavity C3	19,20	Daytime Running Lamp Module	55
Cavity C4	32	Defogger	42
Cavity C5	46	Defogger Switch	42
Cavity C6	19,20	Defogger Switch Lamp	16

Name	Wiring Diagram Sheet Number
Defogger Timer	42
Distributor	7
Dome and Reading Lamp	24
Dome, Cargo and Vanity Lamps	24
Dome Fuse	1,10,23
Electric Choke Heater	8
Electric Choke Switch	8
Emission System	8
Carb Bowl Vent Solenoid	8
Carb Solenoid	8
Electric Choke Heater	8
Electric Choke Switch	8
4-WD Select Trac Gauge	26
4-Wheel Drive Lamp	16
Fan/HTR Fuse	2,6,31
Fog Lamp Relay	14
Fog Lamp Switch	14
Front End Lighting	13,14
Fog Lamp Relay	14
Fog Lamp Switch	14
Left Fog Lamp	13
Left Headlamp	13
Left Park and Turn Lamp	13
Left Side Marker Lamp	13
Right Fog Lamp	14
Right Headlamp	14
Right Park and Turn Lamp	14
Right Side Marker Lamp	14
Front Tailgate Window Switch	41
Fuel Gauge	26
Fuel Sender	43
Fuel Tank System	43
Fuses	
ACC	3
ACC LPS	1,15,16,27
Dome	1,10,23
Fan/HTR	2,6,31
Haz/Stop	1,11,18
IGN LPS	2,6,27,42,43
Park/Tail	1,15,27
RR Wipe	3,21
Turn/BU	3,18,46
Fuse Application Chart	1,2,3
Fuse Panel	49,50
Fusible Links	1,5
Glove Box Lamp	23
Haz/Stop Fuse	1,11,18
Hazard Flasher	18
Hazard Switch	18
Headlamps	13,14
Headlamp Dimmer Switch	15
Headlamp Switch	1,15
Headlamp Switch Controlled	
Interior Lighting	15,16
Ashtray Lamp	16
Defogger Switch Lamp	16
4-Wheel Drive Lamp	16

Name	Wiring Diagram Sheet Number
Headlamp Dimmer Switch	15
Headlamp Switch	15
Heater Control Lamp	16
Instrument Cluster Lamps	16
Panel Dimmer/Dome Lamp Switch	15
Radio	16
Radio Illumination Relay	15
Heater Blower Motor	32
Heater Blower Resistor	32
Heater Control Lamp	16
Hi Beam Indicator	26
Horn	17
Horn Relay	2,17
Horn Switch	17
Ignition Coil	7
Ignition Key Warning Switch	27
Ignition Module	7
Ignition Switch	2,6,44
Ignition System	6,7
Ignition Coil	7
Ignition Module	7
Ignition Switch	6
IGN LPS Fuse	2,6,27,42,43
Intermittent w/Shield Wiper Governor	20
Intermittent Wiper/Washer Switch	20
Intermittent Wiper/Washer System	20
Instrument Cluster Connectors	9,15,18,25,41,43
Instrument Cluster Lamps	16
Instrument Cluster Printed Circuit	26
Keyless Entry System	40
Keyless Entry Module	40
Lamps	
Ashtray Lamp	16
Cargo Lamp	24
Defogger Switch Lamp	16
Dome and Reading Lamp	24
4-Wheel Drive Lamp	16
Glove Box Lamp	23
Heater Control Lamp	16
Instrument Cluster Lamps	16
Left Fog Lamp	13
Left Headlamp	13
Left Park and Turn Lamp	13
Left Side Marker Lamp Front	13
Left Side Marker Lamp Rear	45
Left Tail Lamps	45
LH Courtesy Lamps	23
LH Vanity Lamp	24
Rear License Lamps	45
Right Fog Lamp	14
Right Headlamp	14
Right Park and Turn Lamp	14
Right Side Marker Lamp Front	14
Right Side Marker Lamp Rear	46
Right Tail Lamps	46
RH Courtesy Lamp	23
RH Vanity Lamp	24

Name	Wiring Diagram Sheet Number
Left Fog Lamp	13
Left Front Door Speaker	29
Left Headlamp	13
Left Park and Turn Lamp	13
Left Power Mirror	30
Left Rear Speaker	29
Left Side Marker Lamp Front	13
Left Side Marker Lamp Rear	45
Left Tail Lamps	45
Left Turn Signal Indicator	26
LH Courtesy Lamps	23
LH Front Door Lock Motor	39
LH Front Door Lock Switch	39
LH Front RR Window Switch	33
LH Front Window Motor	34
LH Rear Door Lock Motor	40
LH Rear Door Switch	24
LH Rear Window Motor	37
LH Rear Window Switch	37
LH Turn Relay	48
LH Vanity Lamp	28
Lock Relay	39
Modules	
A/C Control Module	31
Chime Module	27
Compass Module	28
Cruise Control Module	11,12
Ignition Module	7
Keyless Entry Module	40
Motors	
A/C Blower Motor	31
Heater Blower Motor	32
LH Front Door Lock Motor	39
LH Front Window Motor	34
LH Rear Window Motor	37
Power Seat Motors	38
Rear Washer Pump Motor	21
RH Front Door Lock Motor	40
RH Front Window Motor	34
RH Rear Door Lock Motor	40
RH Rear Window Motor	37
Starter Motor	5
Tailgate Window Motor	41
Tailgate Wiper Motor	22
Windshield Wiper Motor	19,20
Multi-Function Switch	11
Neutral Start	5
Oil Pressure and Temperature Systems	9
Oil Pressure Gauge	26
Oil Pressure Sending Unit	9
Overhead Console	28
Panel Dimmer/Dome Lamp Switch	15
Panel Dimmer Switch	1,15
Parking Brake Switch	44
Park/Tail Fuse	1,15,27
Power Accessory	
Circuit Breakers	2,3,22,30,33,38,39,41


Name	Wiring Diagram Sheet Number
Power Door Locks	39,40
Keyless Entry Module	40
LH Front Door Lock	39
LH Front Door Lock Switch	39
LH Rear Door Lock Motor	40
Lock Relay	39
RH Front Door Lock Motor	40
RH Front Door Lock Switch	40
RH Front Door Lock Motor	40
Unlock Relay	39
Power Mirrors	30
Power Mirror Switch	30
Power Seats	38
Power Seat Motors	38
Power Windows	33,34,35,36,37
Left Front Door Connector and Window Lift Switch Function Chart	35
Left Front Door Rear Window Connector and Window Lift Switch Function Chart	35
Left RR Door WDO/Lift Switch Chart	36
LH Front Door RR Window Switch	33
LH Front Window Motor	34
LH Rear Window Motor	37
LH Rear Window Switch	37
RH Front Door Window Switch	34
RH Front Window Motor	34
RH Rear Window Motor	37
RH Rear Window Switch	37
Right Front Door Window Switch Connector and Window Lift Switch Function Chart	35
Right Rear Door Window Connector and Window Lift Switch Function Chart	36
Radio	29
Radio Illumination Relay	15
Rear Lamps	45,46
Back Up Lamp Switch	46
Left Tail Lamps	45
Rear License Lamp	45
Right Side Marker Lamp	46
Right Tail Lamps	46
Rear License Lamp	45
Rear Tailgate Window Switch	41
Rear Washer Pump Motor	21
Rear Window Defogger	42
Rear Wiper Lockout Switch	22
Rear Wiper Switch	21
Rear Wiper System	21,22
Rear Washer Pump	21
Rear Wiper Lockout Switch	22
Rear Wiper Motor	22
Rear Wiper Switch	21
Relays	
Blower Switch Mode Relay	31
Fog Lamp Relay	14
Horn Relay	2,17
LH Turn Relay	48
Lock Relay	39


Name	Wiring Diagram Sheet Number
Radio Illumination Relay	15
RH Turn Relay	48
Starter Relay	5
Stop Lamp Relay	48
Tail Lamp Relay	48
Unlock Relay	39
RH Courtesy Lamp	23
RH Front Door Switch	23
RH Front Door Lock Motor	40
RH Front Door Lock Switch	40
RH Front Door Window Switch	34
RH Front Window Motor	34
RH Rear Door Switch	24
RH Rear Door Lock Motor	40
RH Rear Window Motor	37
RH Rear Window Switch	37
RH Turn Relay	48
RH Vanity Lamp	24
Right Fog Lamp	14
Right Front Door Speaker	29
Right Headlamp	14
Right Park and Turn Lamp	14
Right Power Mirror	30
Right Rear Speaker	29
Right Side Marker Lamp (Front)	14
Right Side Marker Lamp (Rear)	46
Right Tail Lamps	46
Right Turn Signal Indicator	26
RR Wipe Fuse	3,21
Seat Belt Indicator	26
Seat Belt Switch	27
Sensors	
A/C Temperature Sensor	31
Speed Sensor	12
Temperature Sensor	28
Solenoids	
Carb Bowl Vent Solenoid	8
Carb Solenoid	8
Starter Solenoid	5
Speed Sensor	12
Splices	
Splice 10	4,5
Splice 10-1	2,5,6
Splice 10-2	1,4,5,15
Splice 10-3	2,5,22,38,39
Splice 10-4	1,5,10,11,14,15,27
Splice 11	2,4,6,7,27,42,43
Splice 11-1	5,7
Splice 12	6,8,31
Splice 15	30,33
Splice 15-1	3,30,33,41
Splice 17	31
Splice 18	48
Splice 22	39
Splice 22-2	22,42
Splice 22-3	22,41
Splice 22-4	2,22,38,39,41


Name	Wiring Diagram Sheet Number
Splice 22-5	41
Splice 23	48
Splice 24	48
Splice 33	5,7
Splice 34	47
Splice 46	47
Splice 51	10,23,25,29
Splice 51-1	24,28,40
Splice 52	16,25,28,29
Splice 65	47
Splice 68	31
Splice 72	13,27
Splice 98	24,28
Splice 99	11,14,16,17,19,20,27,31,33,38,39
Splice 99-1	13,19,20,21,55
Splice 99-2	23,33,39
Splice 99-3	16,23,25,29,42
Splice 99-4	24,28,38,40
Splice 99-5	24,27,38
Splice 99-6	22,42,46
Splice 117	14
Splice 142	12
Splice 160	33
Splice 161	33,39
Splice L2	39
Splice L3	39
Splice R4	21
Starter Motor	5
Starter Relay	5
Starter Solenoid	5
Starter System	5
Starter Motor	5
Starter Relay	5
Starter Solenoid	5
Steering Column Connector (11 Way)	54
Cavity D	16
Cavity E	27
Cavity F	27
Cavity G	17
Cavity H	18
Cavity J	18
Cavity K	18
Cavity L	18
Cavity M	18,45
Cavity N	18,45
Cavity P	18
Stereo Radio	29
Stop Lamp Relay	48
Stop Lamp Switch	11
Switches	
A/C Low Pressure Switch	31
A/C Mode Switch	31
Automatic Trans Neutral Start and Back-Up Switch	5
Back-Up Lamp Switch	46
Blower Switch	32
Brake Warning Switch	44
Cargo Lamp Switch	24


Name	Wiring Diagram Sheet Number
Defogger Switch	42
Electric Choke Switch	8
Fog Lamp Switch	14
Front Tailgate Window Switch	41
Hazard Switch	18
Headlamp Dimmer Switch	15
Headlamp Switch	1,15
Ignition Switch	2,6,44
Intermittent Wiper/Washer Switch	20
LH Front Door Lock Switch	39
LH Front Door Rear Window Switch	33
LH Rear Door Switch	37
Multi-Function Switch	11
Panel Dimmer/Dome Lamp Switch	15
Panel Dimmer Switch	1,15
Parking Brake Switch	44
Power Mirror Switch	30
Rear Tailgate Window Switch	41
Rear Wiper Lockout Switch	22
Rear Wiper Switch	21
RH Front Door Switch	23
RH Front Door Lock Switch	40
RH Front Door Window Switch	34
RH Rear Door Switch	24
RH Rear Window Switch	37
Seat Belt Switch	27
Stop Lamp Switch	11
Tailgate Window Safety Switch	41
Turn Signal Switch	18
Underhood Lamp Mercury Switch	10
Windshield Wiper Switch	19
Tailgate Window	41
Tailgate Window Motor	41
Tailgate Window Safety Switch	41
Tailgate Wiper Motor	22
Tail Lamp Relay	48
Temperature Sending Unit	9
Temperature Sensor	28
Trailer Connector	47
Trailer Tow Circuit Breaker	47
Trailer Tow Harness	47,48
LH Turn Relay	48
RH Turn Relay	48
Stop Lamp Relay	48
Tail Lamp Relay	48
Trailer Tow Circuit Breaker	47
Turn/BU Fuse	2,18,46
Turn Signal and Hazard Warning System	18
Turn Signal Flasher	18
Turn Signal Switch	18
Underhood Lamp	10
Underhood Lamp Mercury Switch	10
Unlock Relay	39
Voltmeter	26
Warning Indicators	44
Windshield Washer Pump	19,20
W/Shield Wiper Circuit Breaker	3,19,20


Name	Wiring Diagram Sheet Number
Windshield Wiper Motor	19,20
Windshield Wiper Switch	19
Windshield Wiper System	19

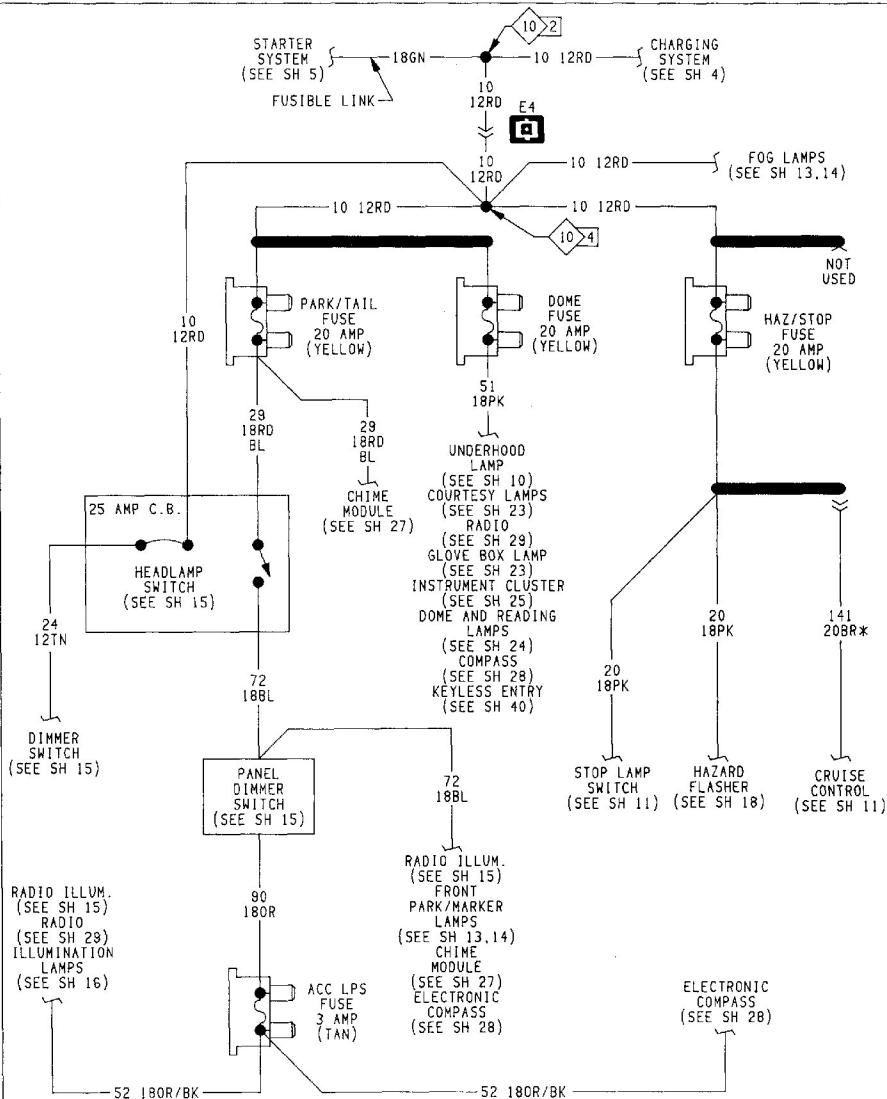

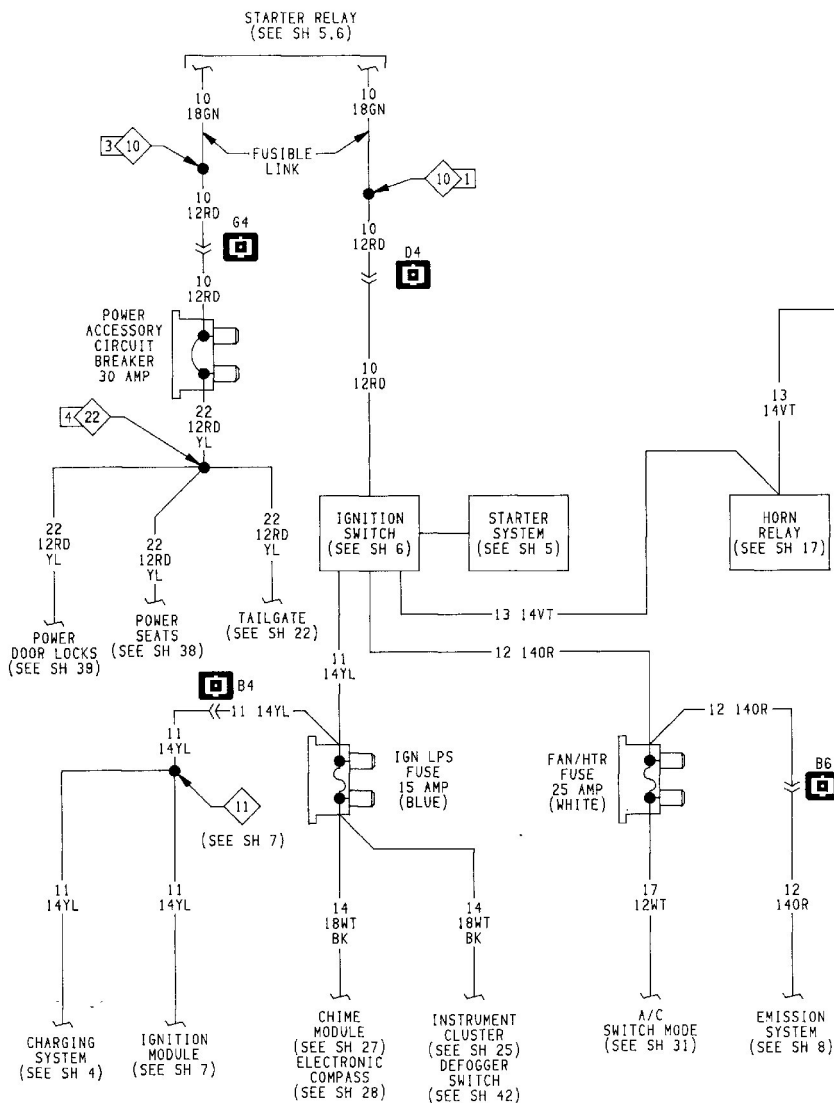


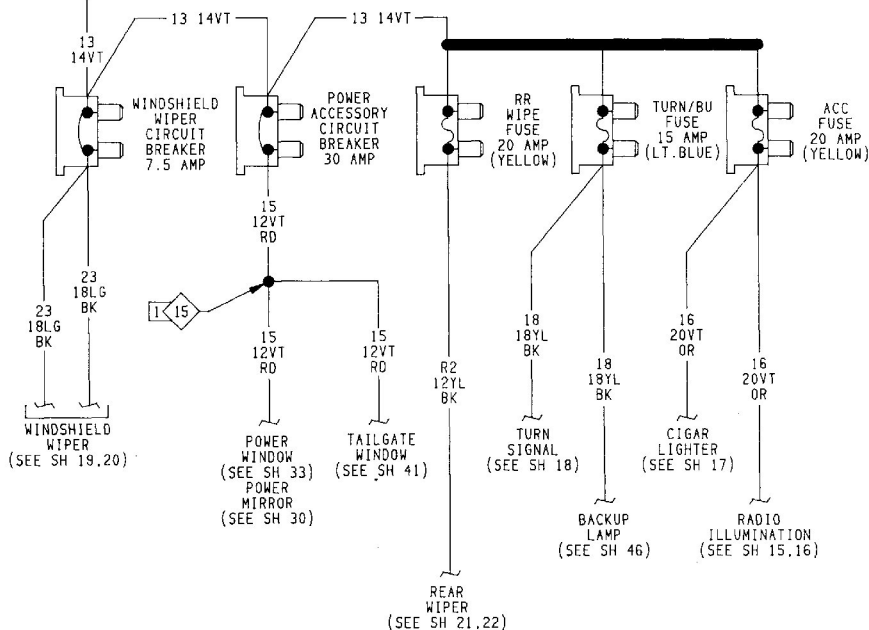


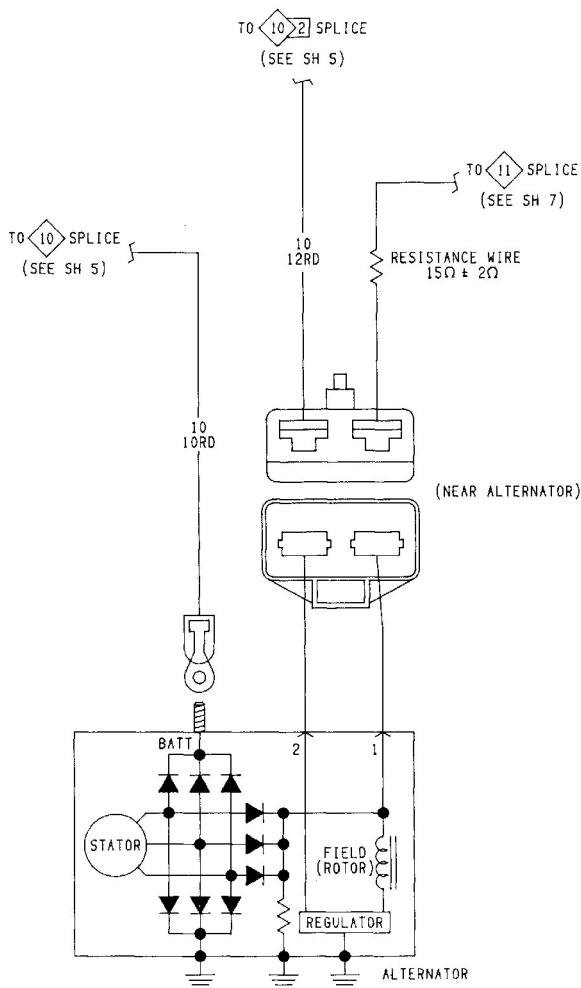


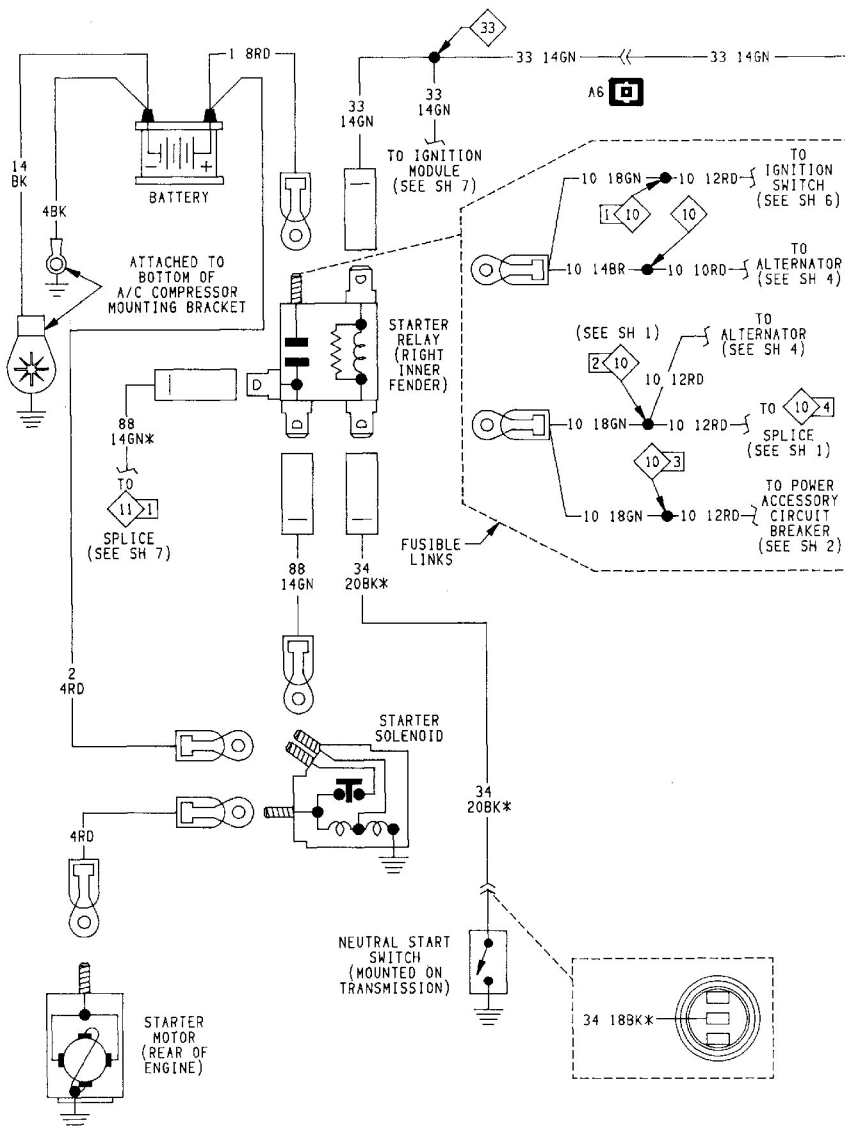



1990

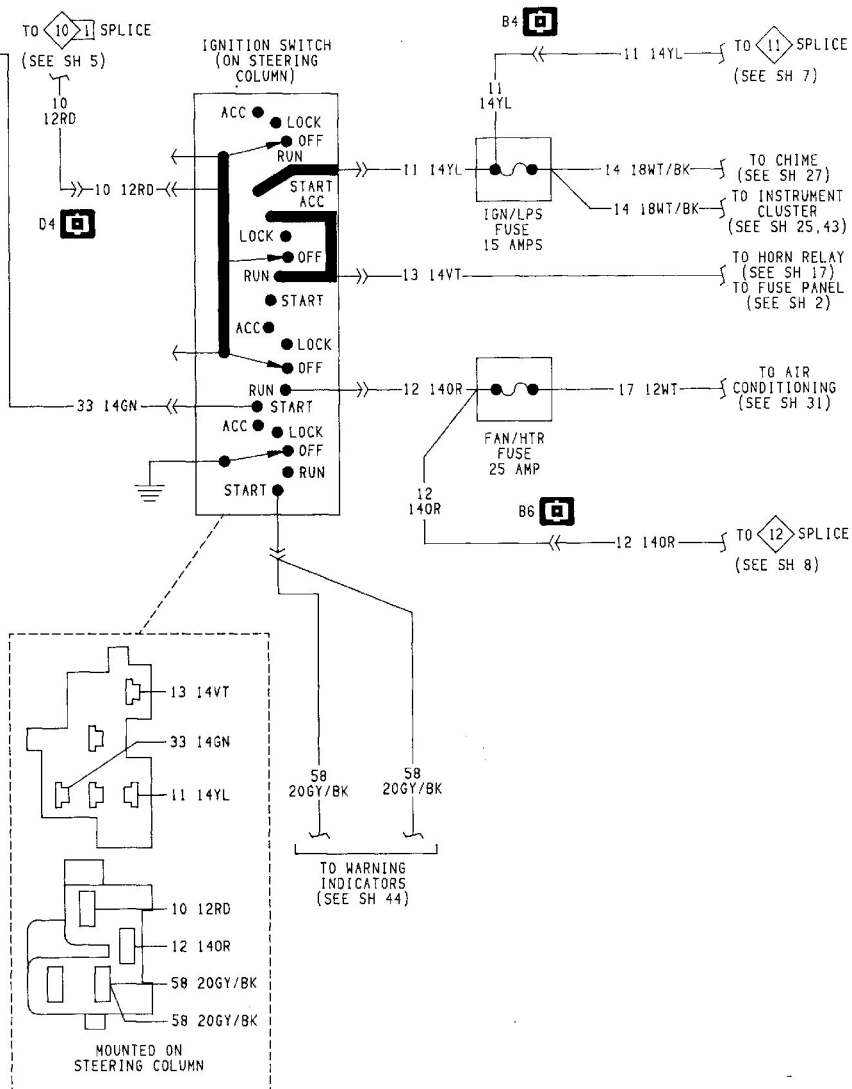

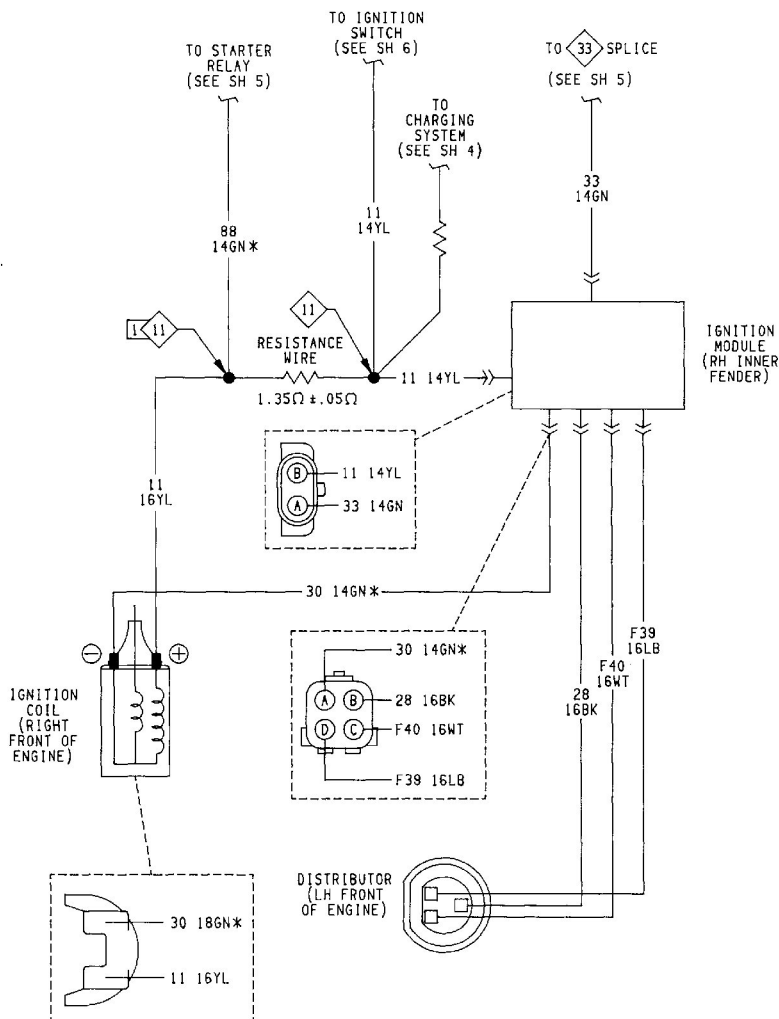


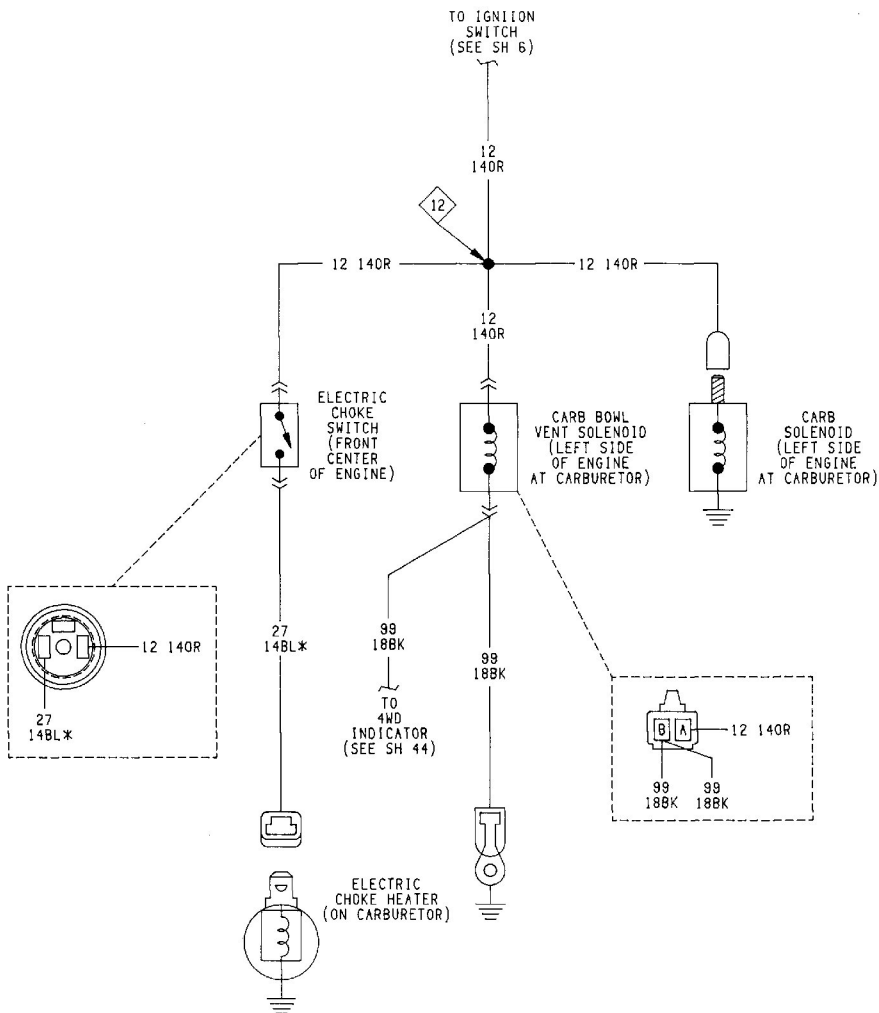

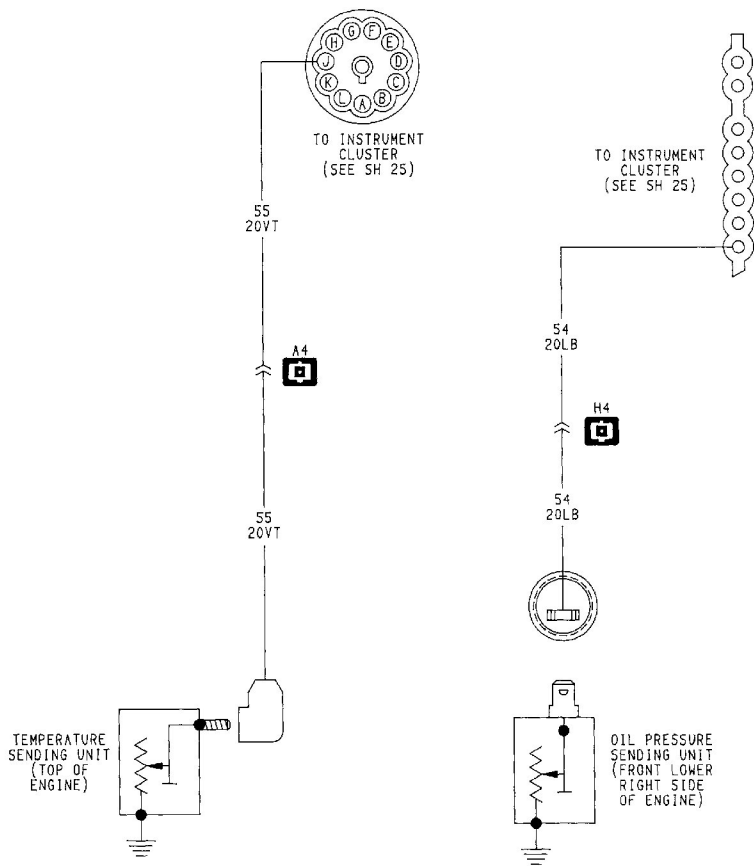


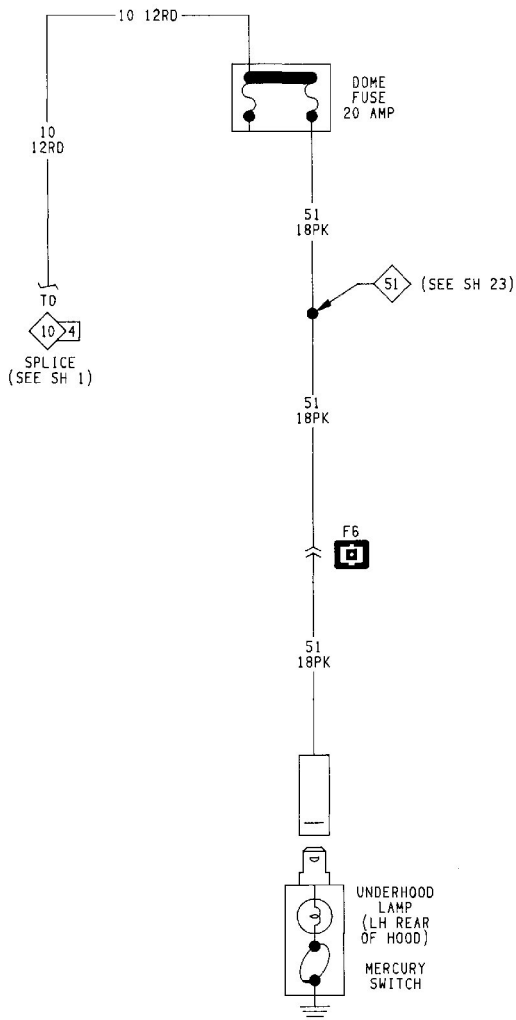


1990

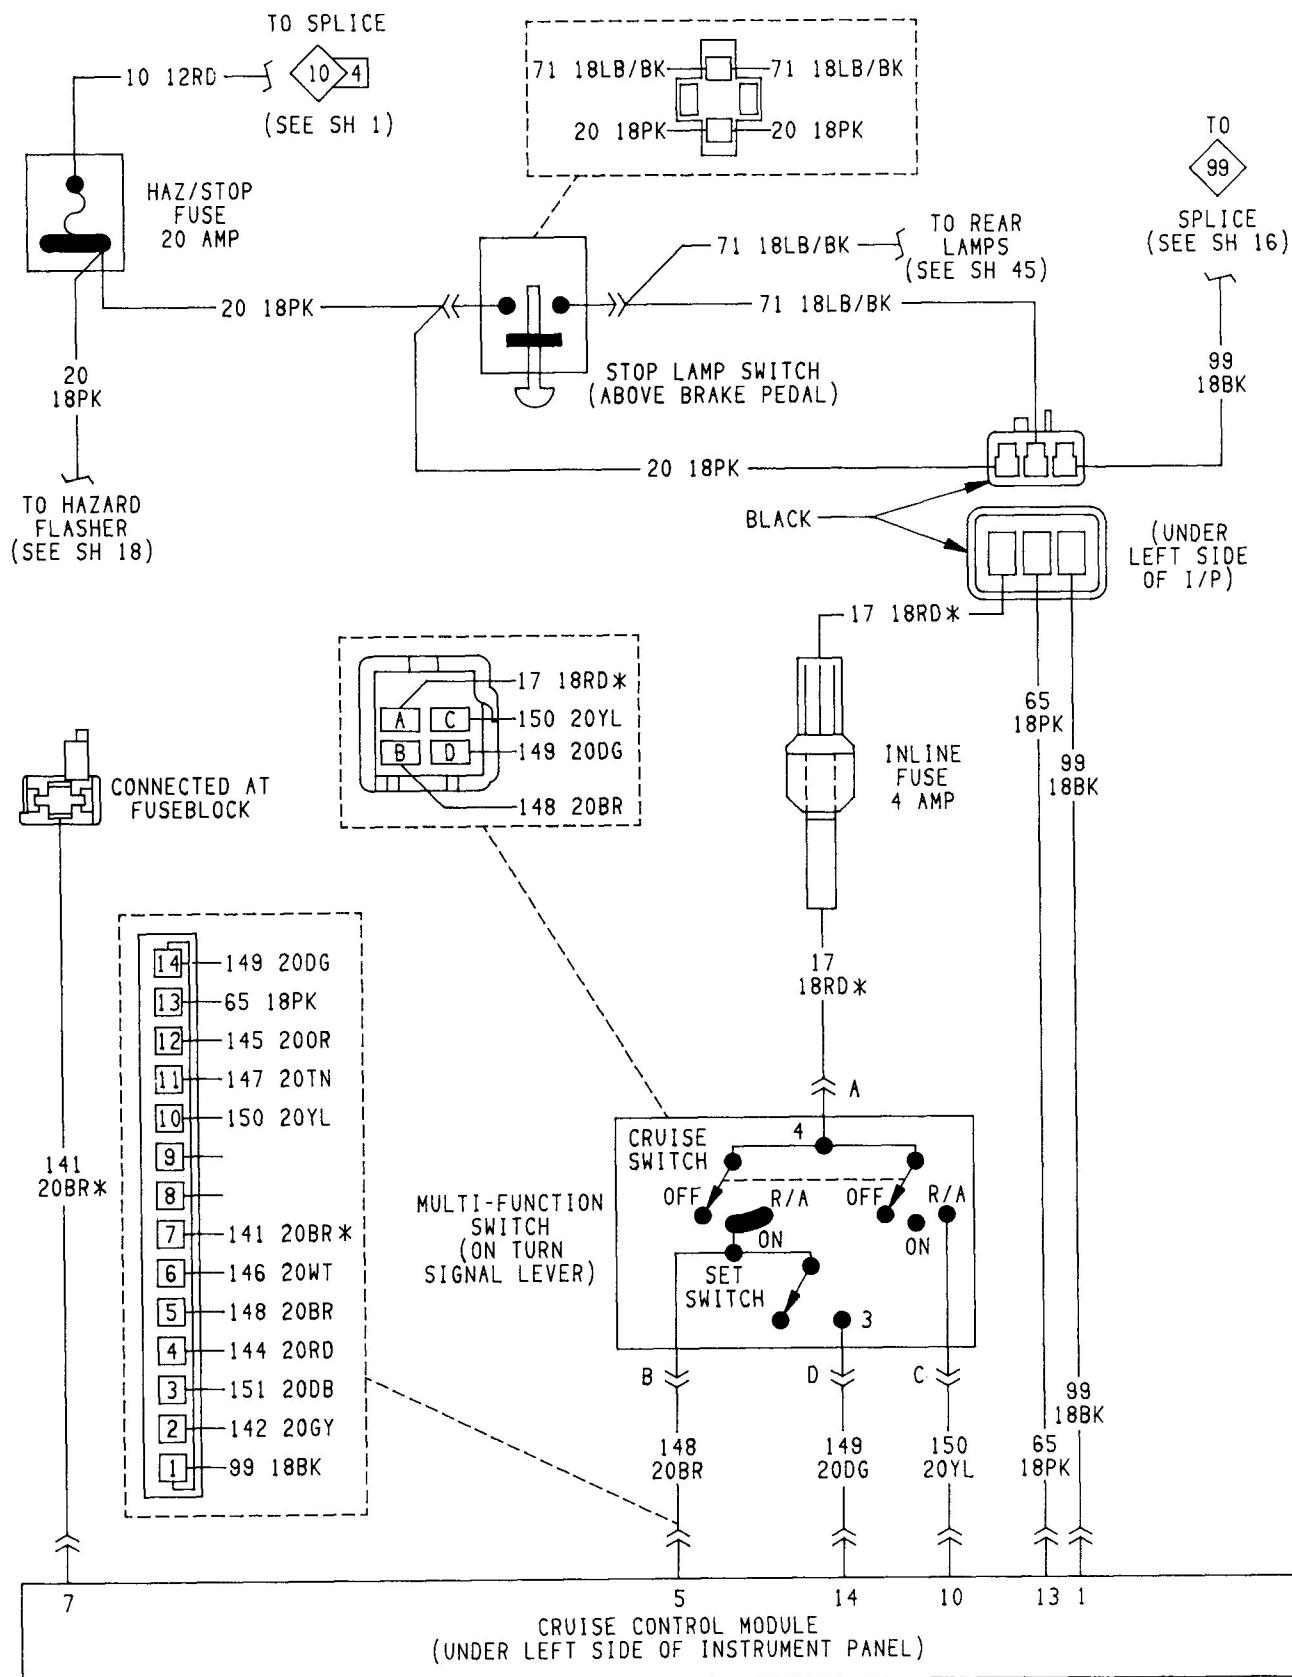



1990

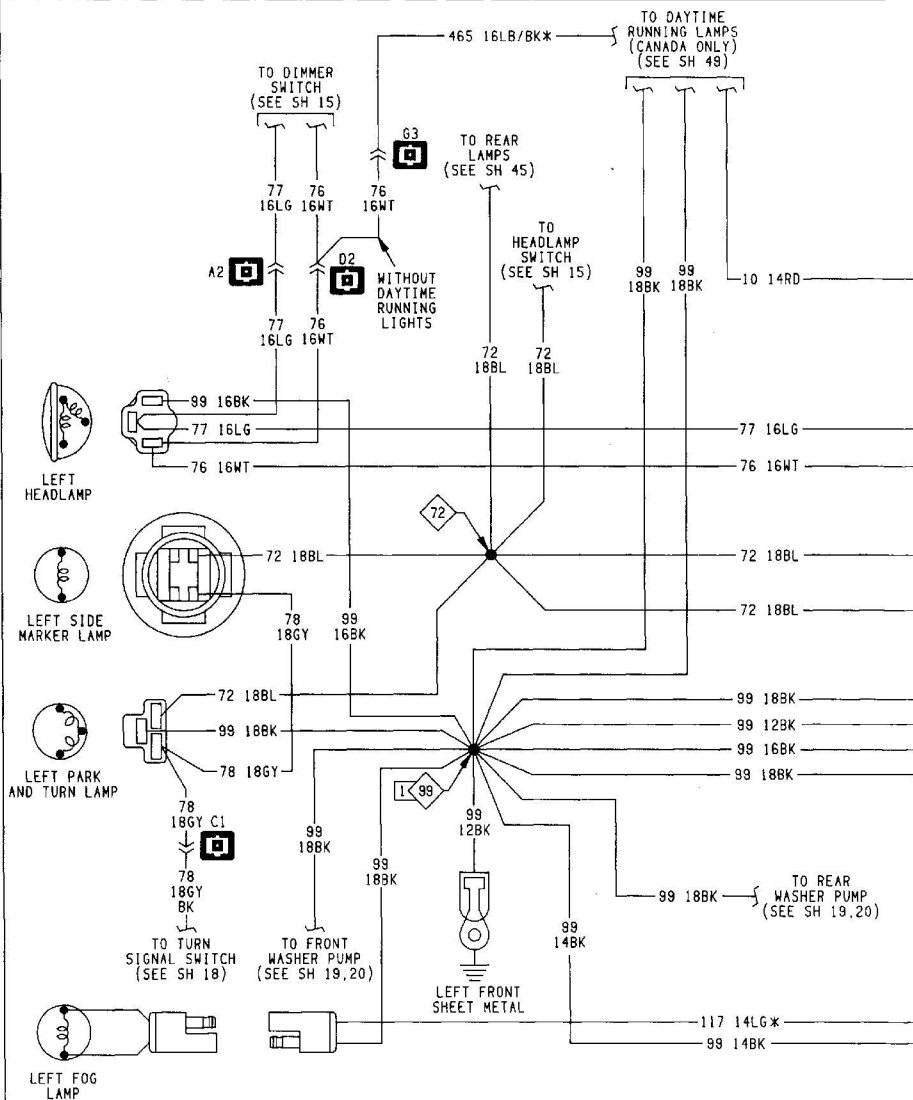


 



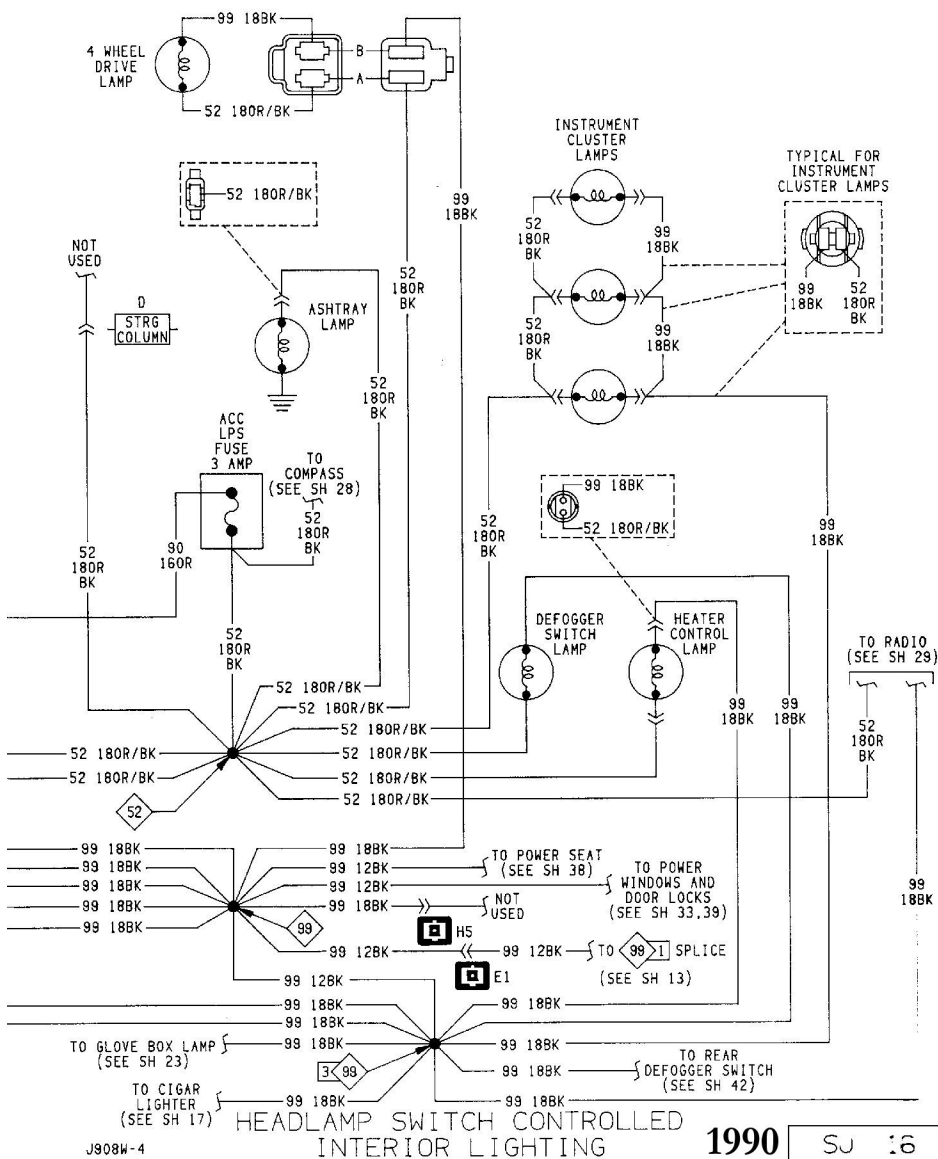

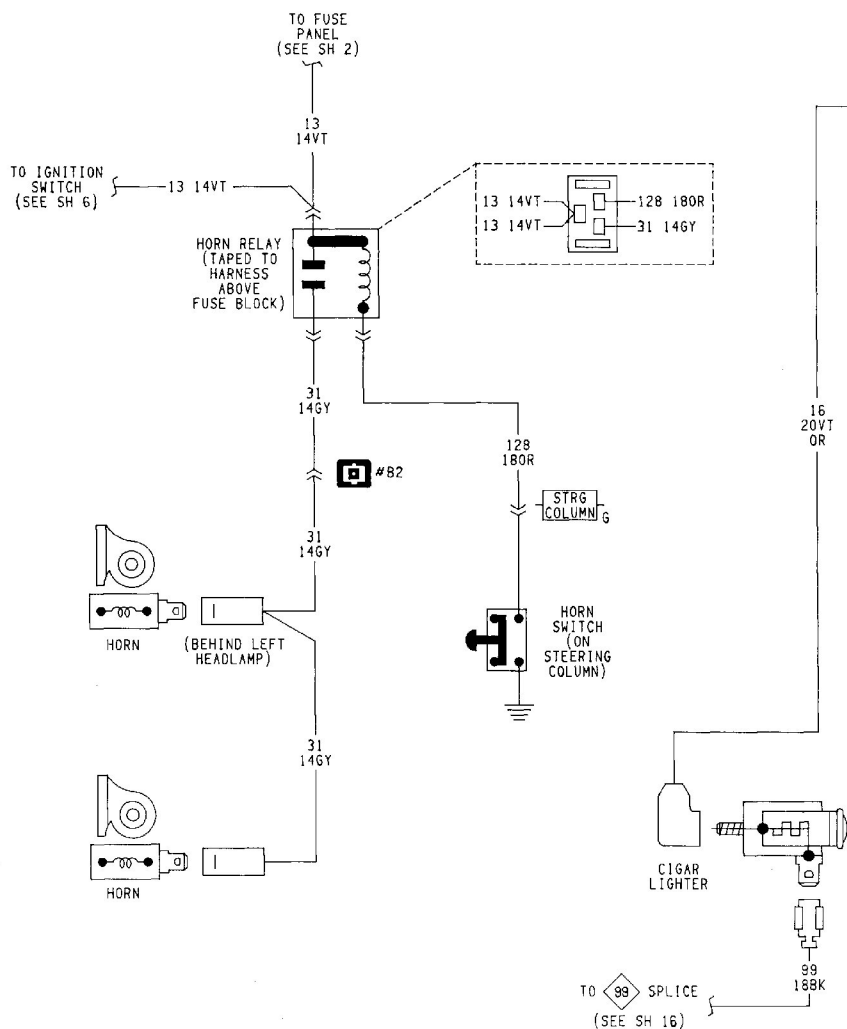

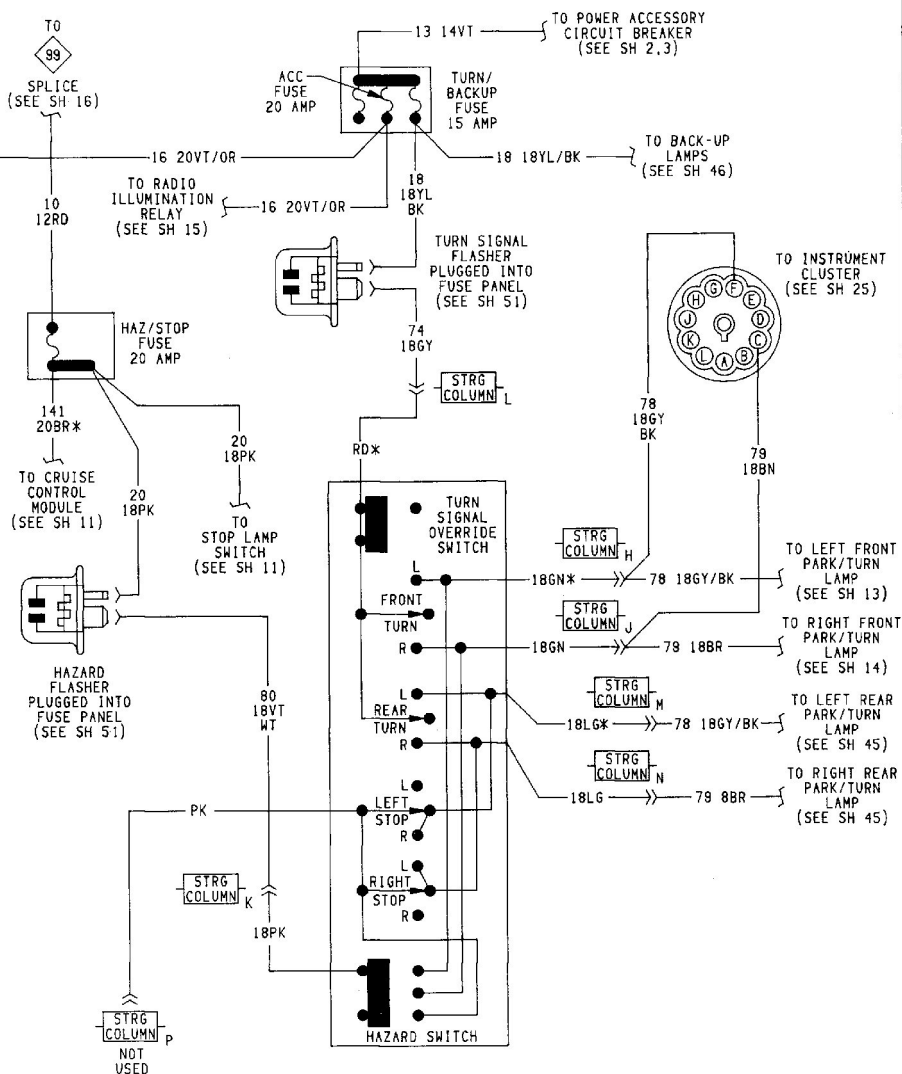





TO POWER ACCESSORY
CIRCUIT BREAKER
(SEE SH 3)

13
14VT



 
RR WIPE
FUSE
(25 AMP)

R2
18YL
BK

R3
18BR
WT

R3 18BR/WT

REAR
WIPE
SWITCH



D

A

R4
18VT
OR

 


R4
18VT
OR



R4
18VT
OR

R4
18VT
OR





REAR WASHER
PUMP MOTOR
(LEFT SIDE
OF ENGINE
COMPARTMENT)

99 18BK

TO

99 1

 SPLICE
(SEE SH 13)

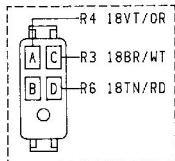

(ENGINE COMPARTMENT
ON UPPER LEFT SIDE
OF DASH PANEL)

BLACK



R6 18TN/RD

R4 18VT/OR



R3
18BR
WT

R2
18YL
BK

R4
18VT
OR

R6
18TN
RD

BLACK



(UNDER LEFT
SIDE AT REAR
OF BODY)





R4 18VT/OR

R6 18TN/RD



R2 18YL/BK


R3 18BR/WT

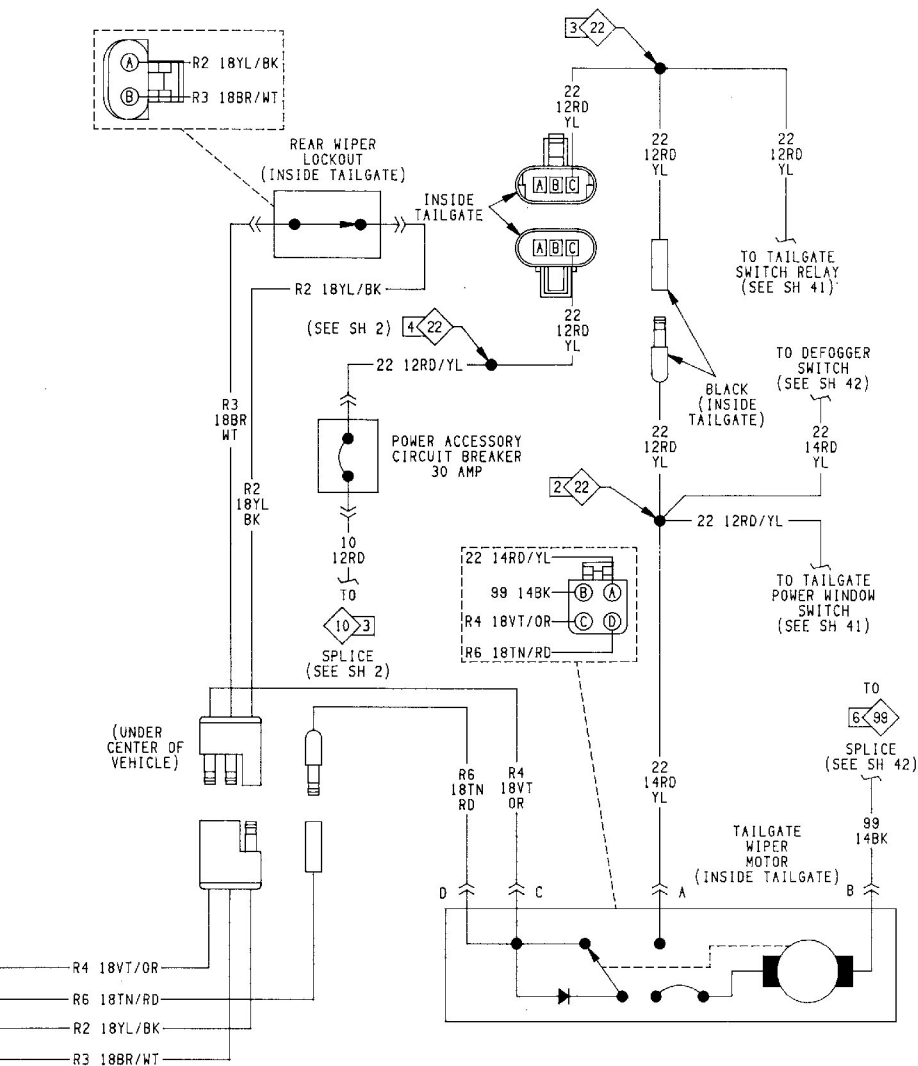

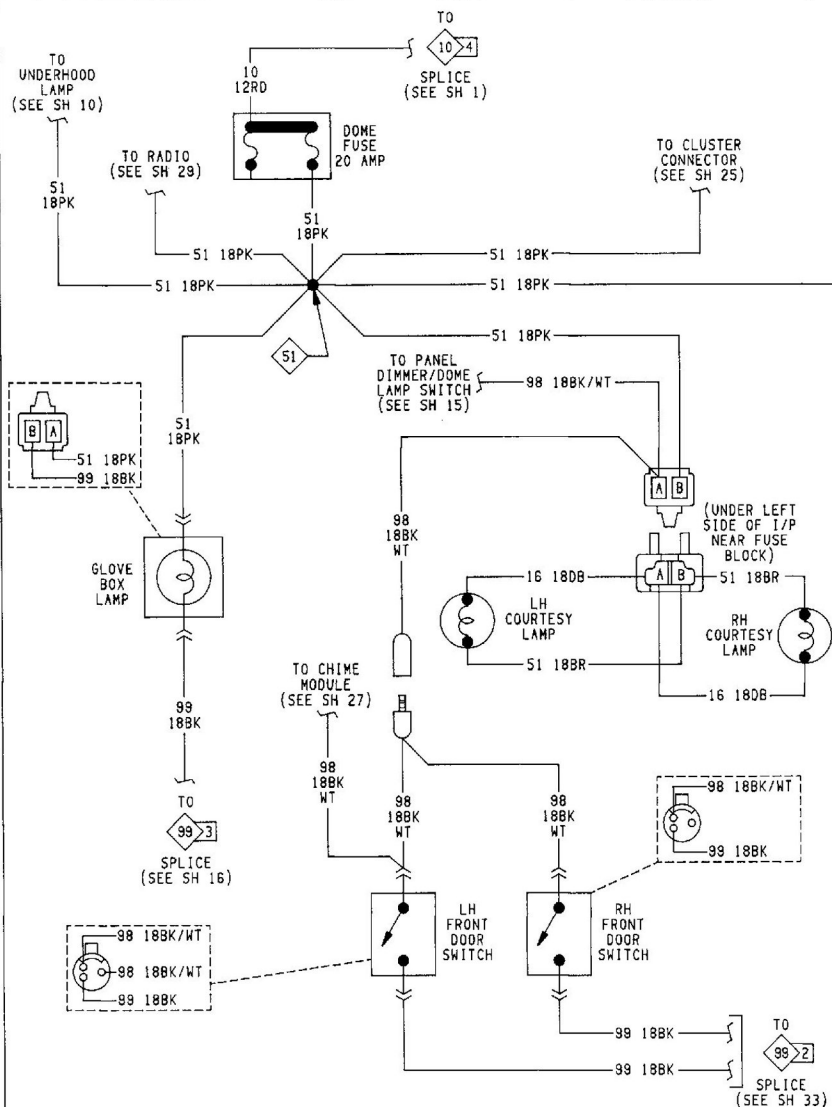





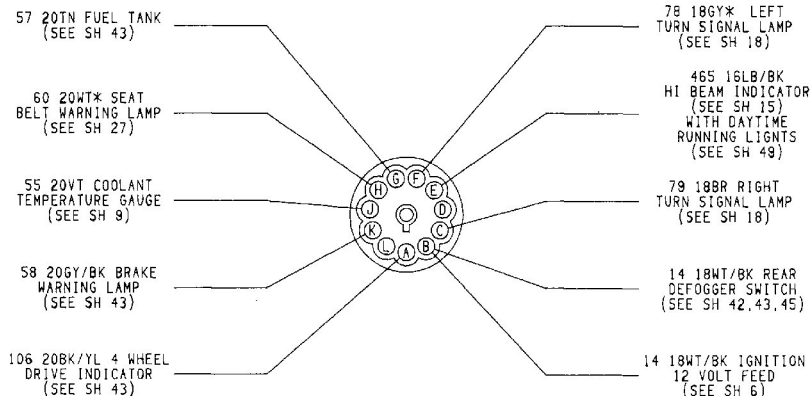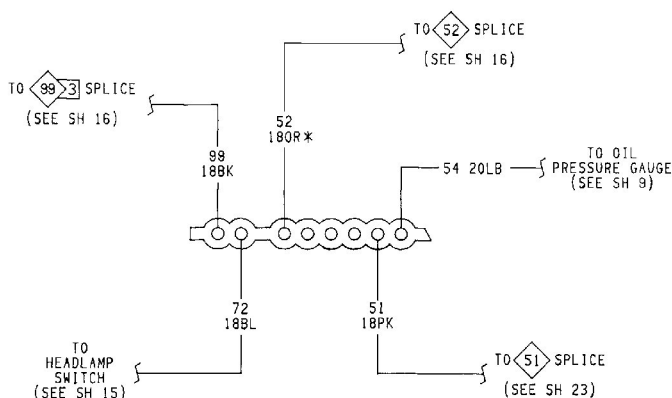


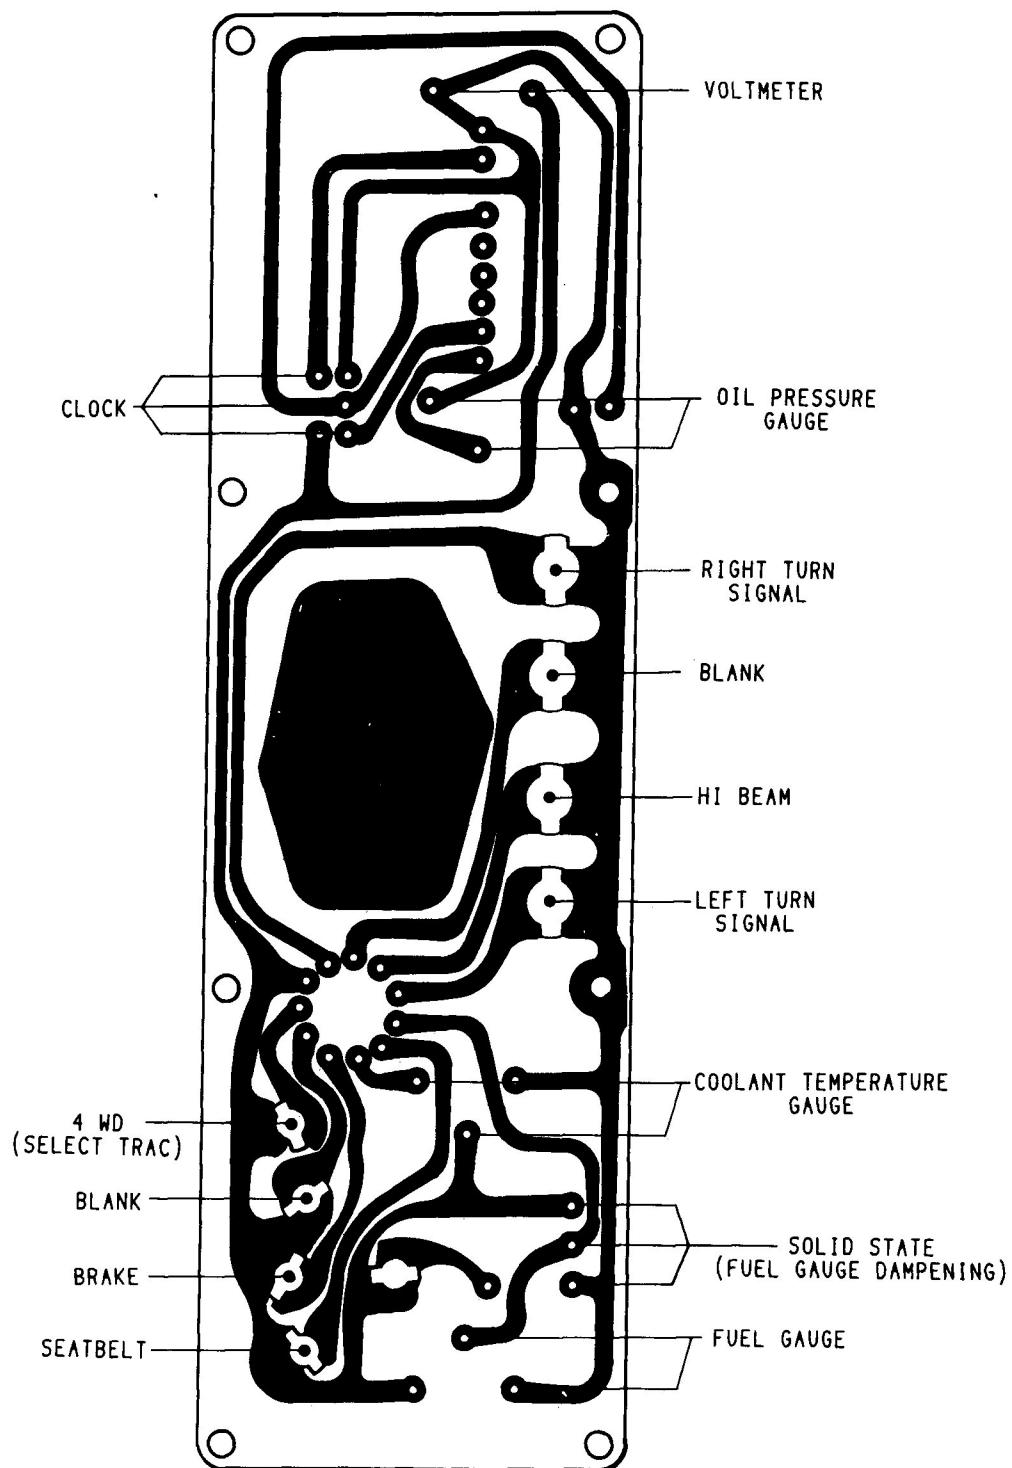





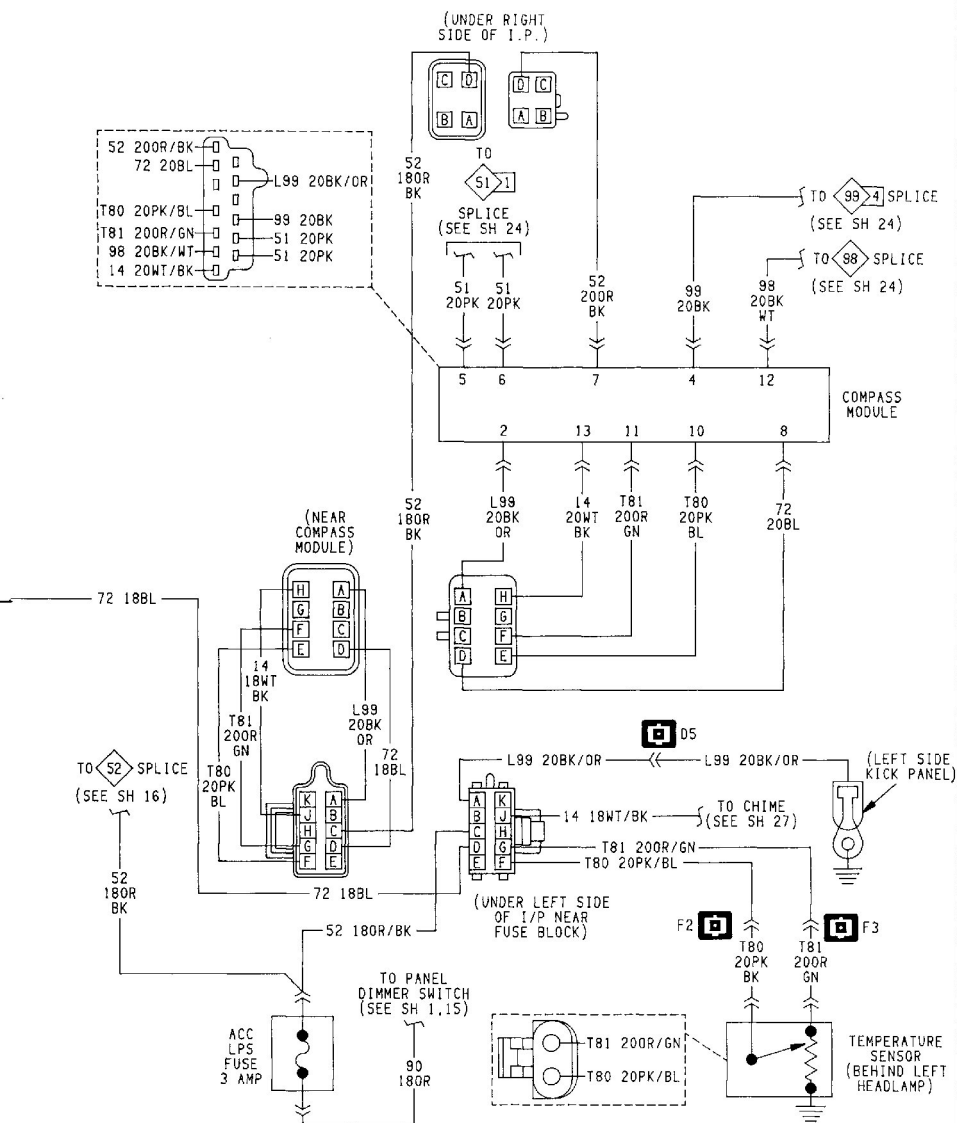

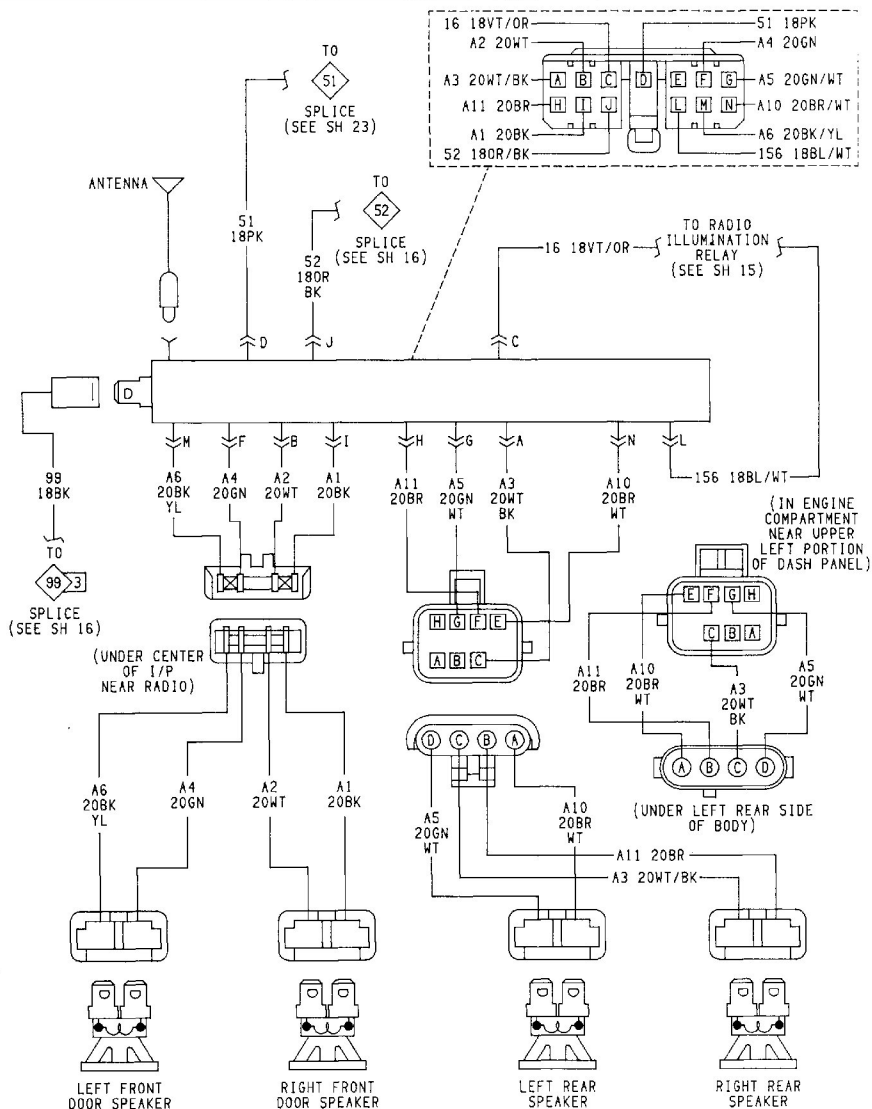

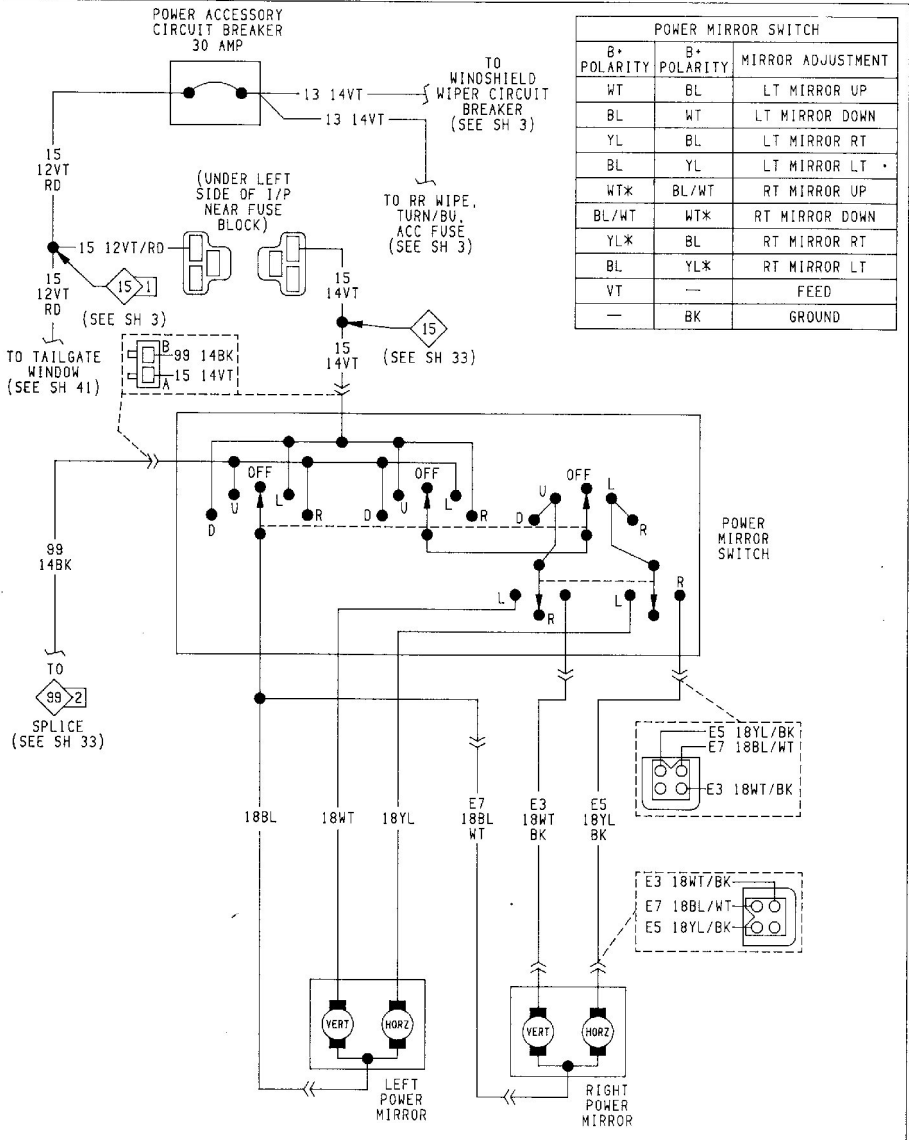


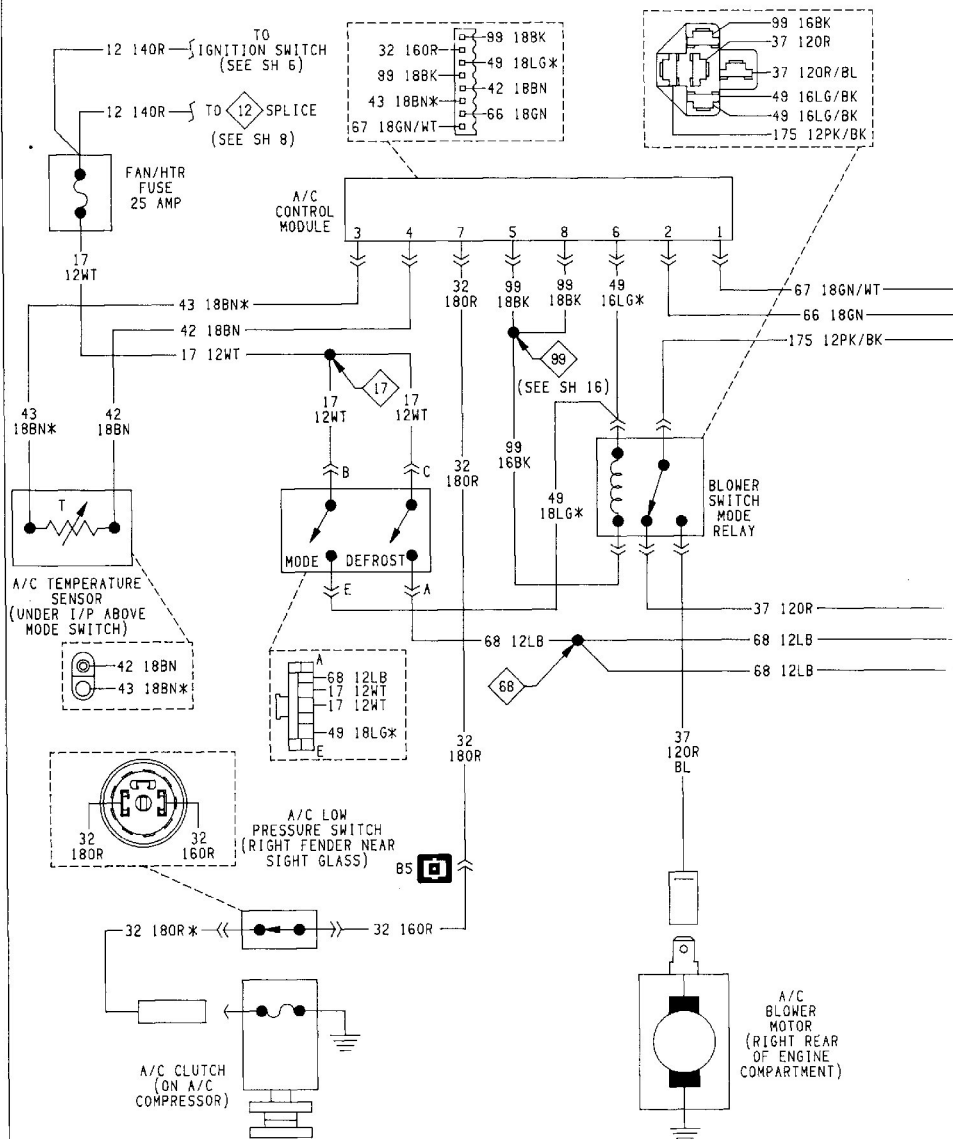

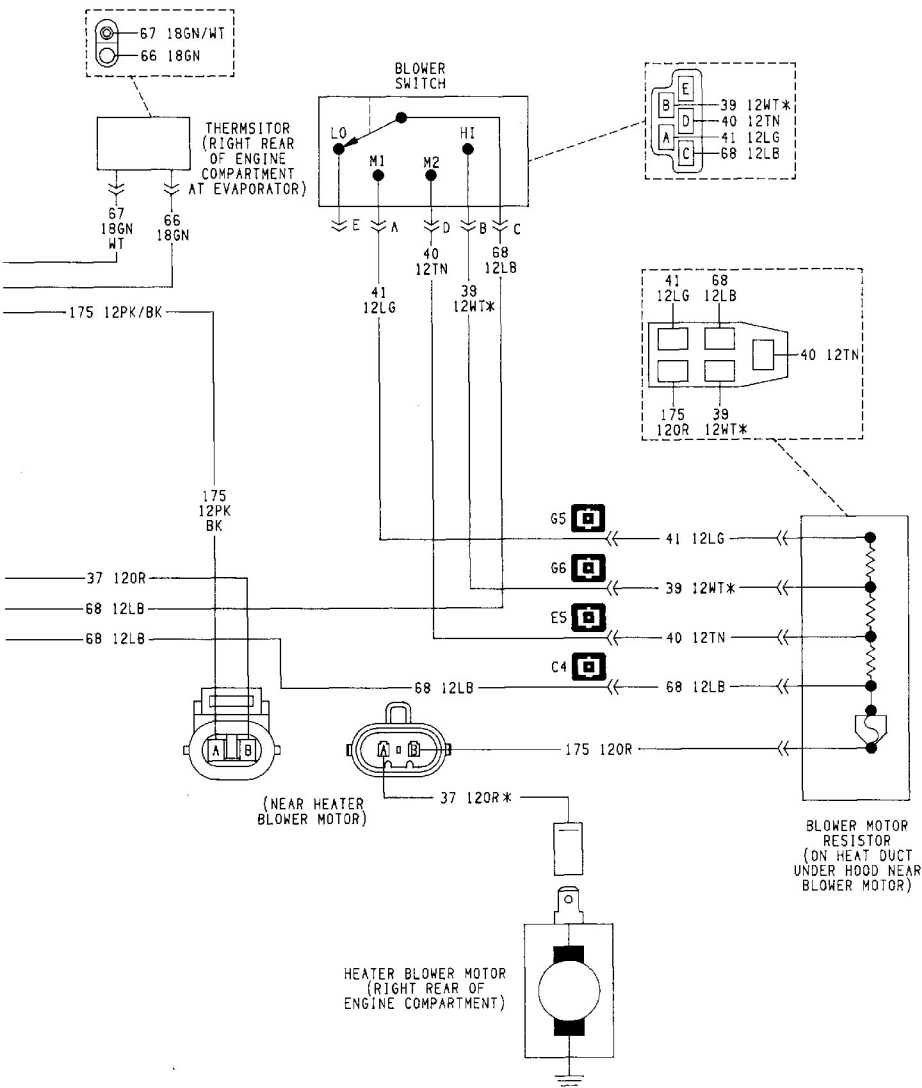




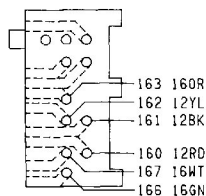


LEFT FRONT DOOR CONNECTOR
AND WINDOW LIFT SWITCH FUNCTION

B+ POLARITY	B- POLARITY	WINDOW MOVEMENT
YL	OR	LT FRONT UP
OR	YL	LT FRONT DOWN
GN	WT	RT FRONT UP
WT	GN	RT FRONT DOWN
RD	BK	FEED AND GROUND

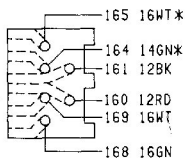LEFT FRONT DOOR REAR WINDOW
CONNECTOR AND WINDOW LIFT SWITCH FUNCTION


B+ POLARITY	B- POLARITY	WINDOW MOVEMENT
GN*	WT*	LT REAR UP
WT*	GN*	LT REAR DOWN
GN	WT	RT REAR UP
WT	GN	RT REAR DOWN
RD	BK	FEED AND GROUND

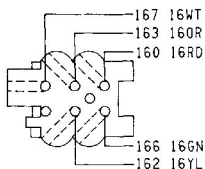RIGHT FRONT DOOR WINDOW SWITCH
CONNECTOR AND WINDOW LIFT SWITCH FUNCTION

B+ POLARITY	B- POLARITY	WINDOW MOVEMENT
YL	OR	RT FRONT UP (DOOR SWITCH)
OR	YL	RT FRONT DOWN (DOOR SWITCH)
GN	WT	RT FRONT UP (MASTER SWITCH)
WT	GN	RT FRONT DOWN (MASTER SWITCH)
RD	—	FEED


**LEFT REAR DOOR WINDOW CONNECTOR
AND WINDOW LIFT SWITCH FUNCTION**

B+ POLARITY	B- POLARITY	WINDOW MOVEMENT
YL	OR	LT REAR UP (DOOR SWITCH)
OR	YL	LT FRONT DOWN (DOOR SWITCH)
DG	BN	LT REAR UP (MASTER SWITCH)
BN	DG	LT REAR DOWN (MASTER SWITCH)
LG	—	FEED

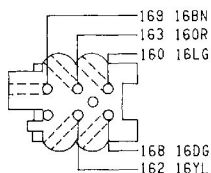


**RIGHT REAR DOOR WINDOW CONNECTOR
AND WINDOW LIFT SWITCH FUNCTION**


B+ POLARITY	B- POLARITY	WINDOW MOVEMENT
YL	OR	RT REAR UP (DOOR SWITCH)
OR	YL	RT REAR DOWN (DOOR SWITCH)
DG	BN	RT REAR UP (MASTER SWITCH)
BN	DG	RT REAR DOWN (MASTER SWITCH)
LG	—	FEED

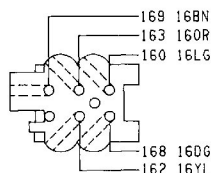


POWER SEAT MOTOR INSULATOR POLARITY


B+ POLARITY	B- POLARITY	SEAT MOVEMENT
WT	TN	FORWARD
TN	WT	REARWARD
YL	LG	REAR UP
LG	YL	REAR DOWN
OR	LB	FRONT UP
LB	OR	FRONT DOWN
RD/YL	—	FEED
—	BK	GROUND

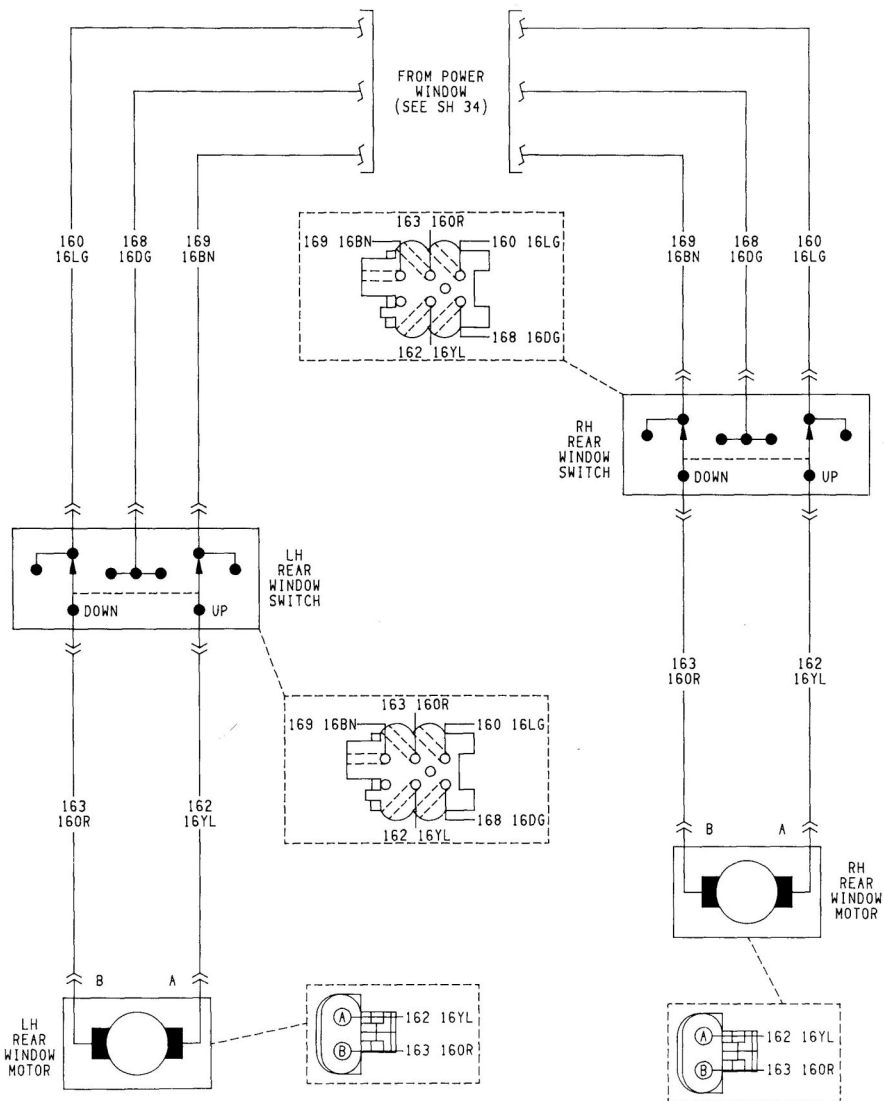

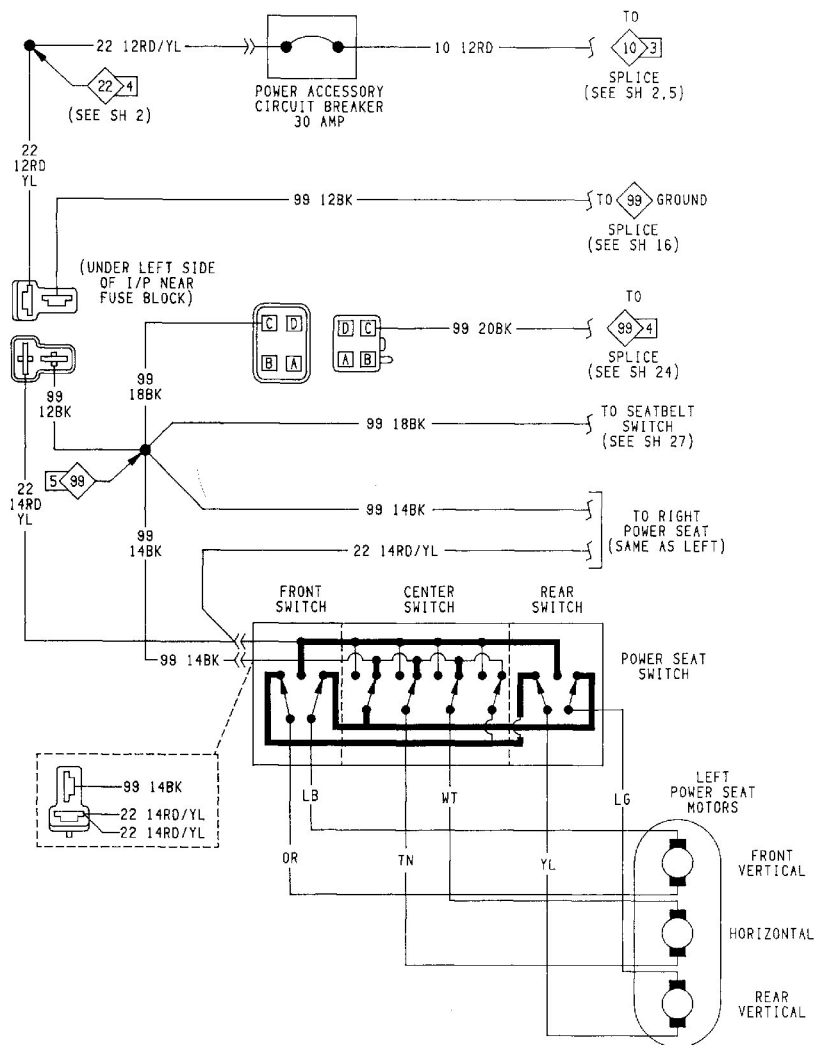


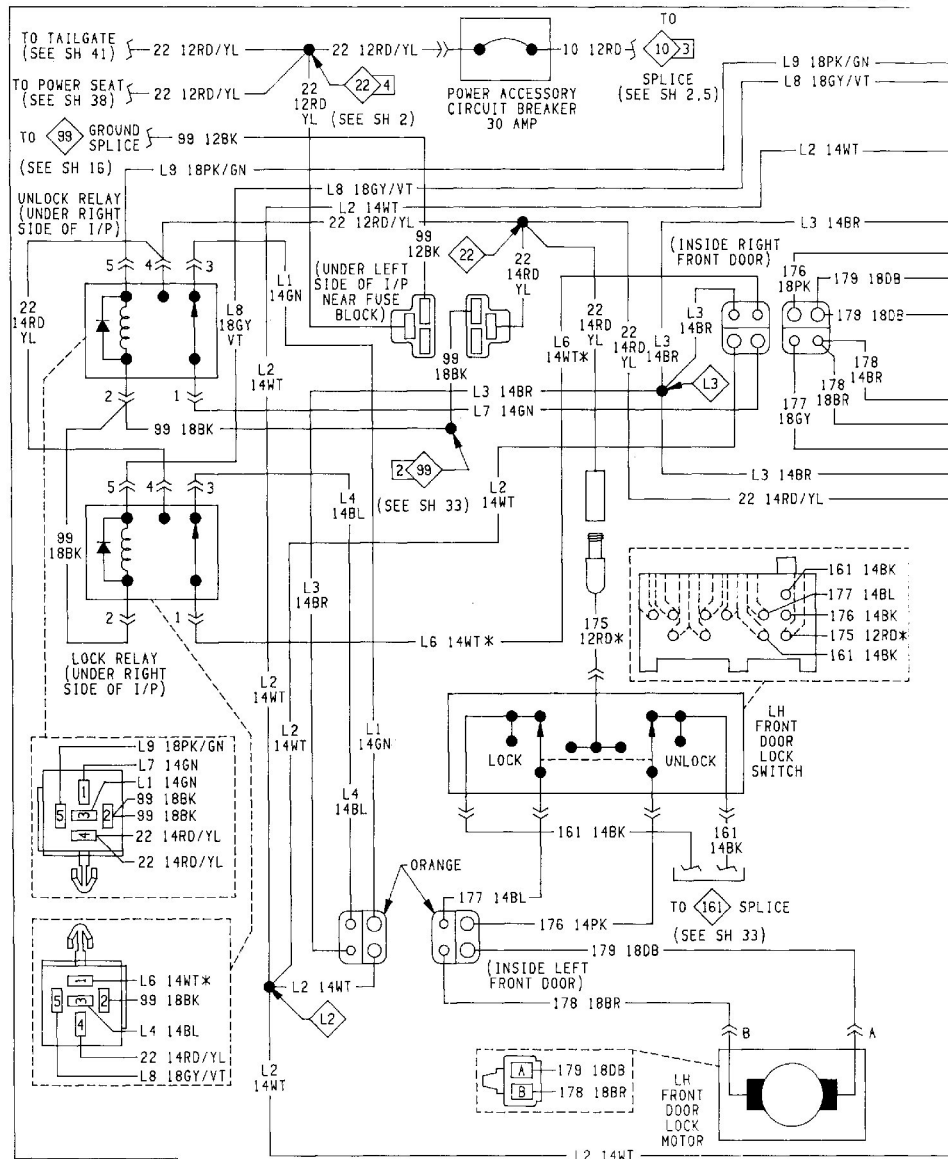






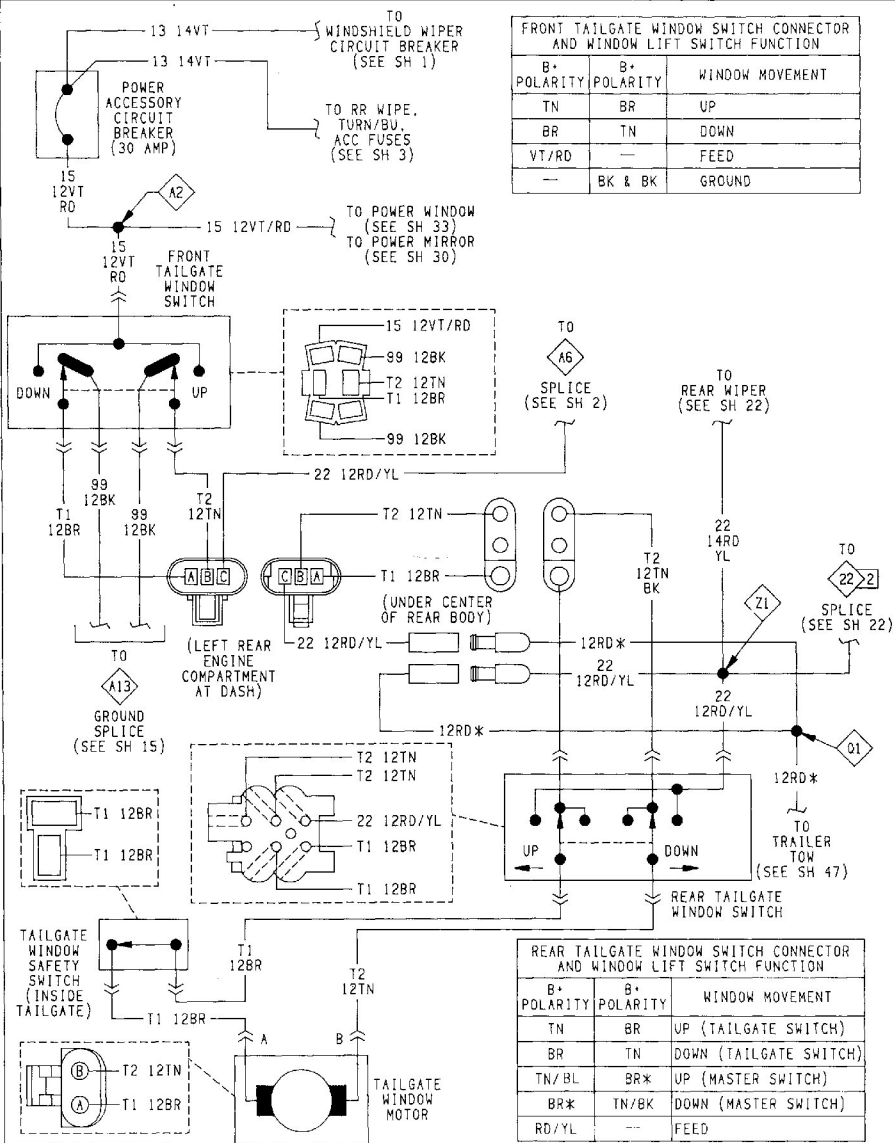




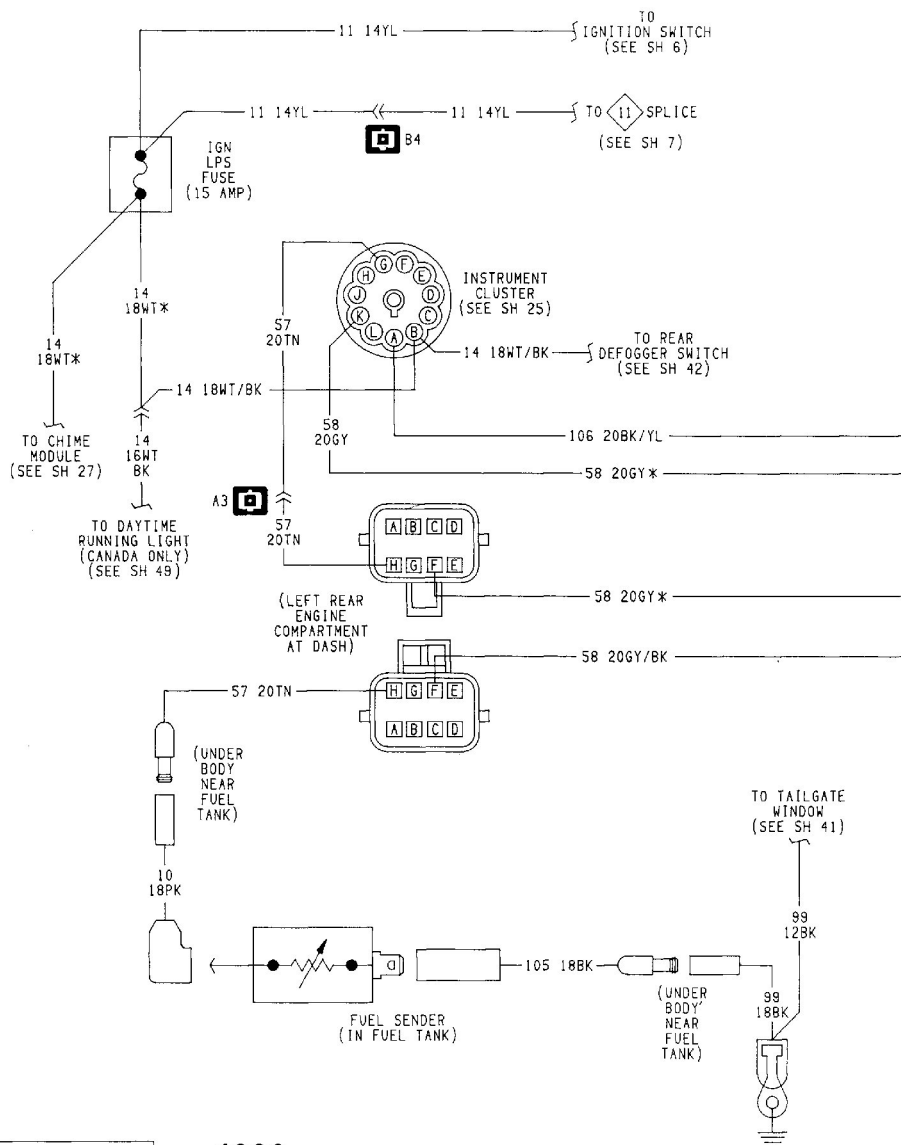


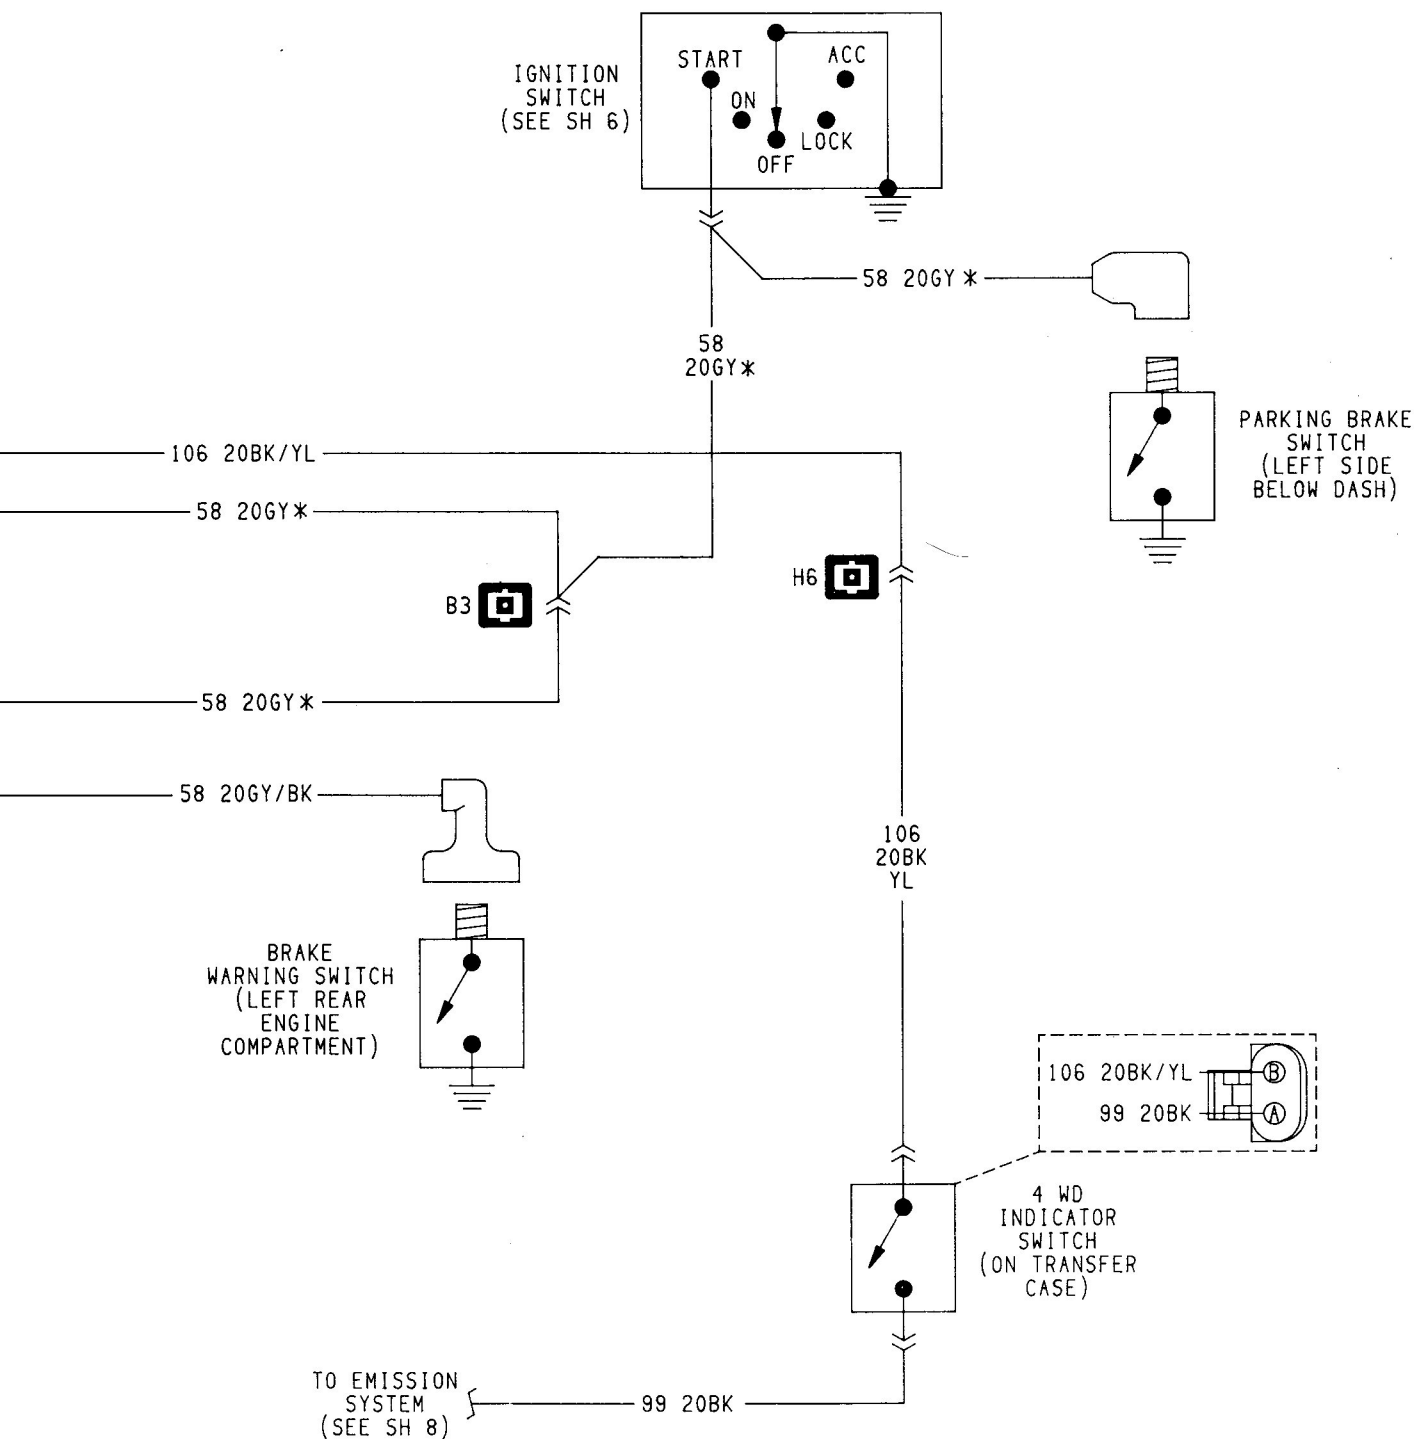

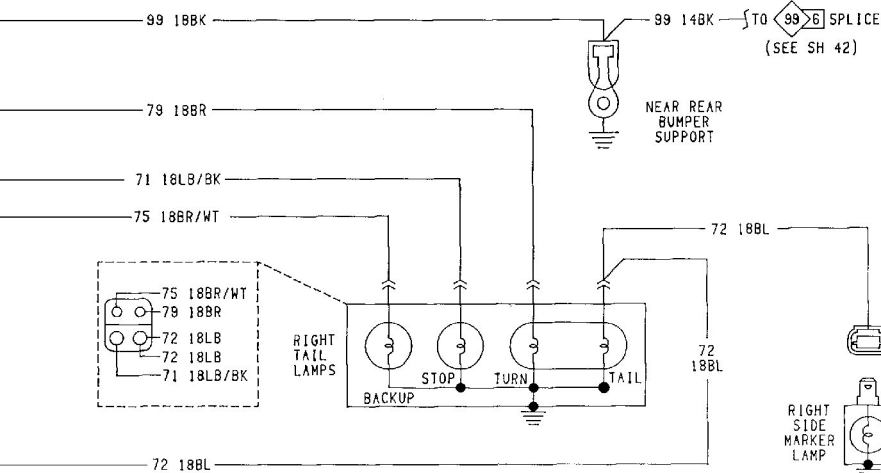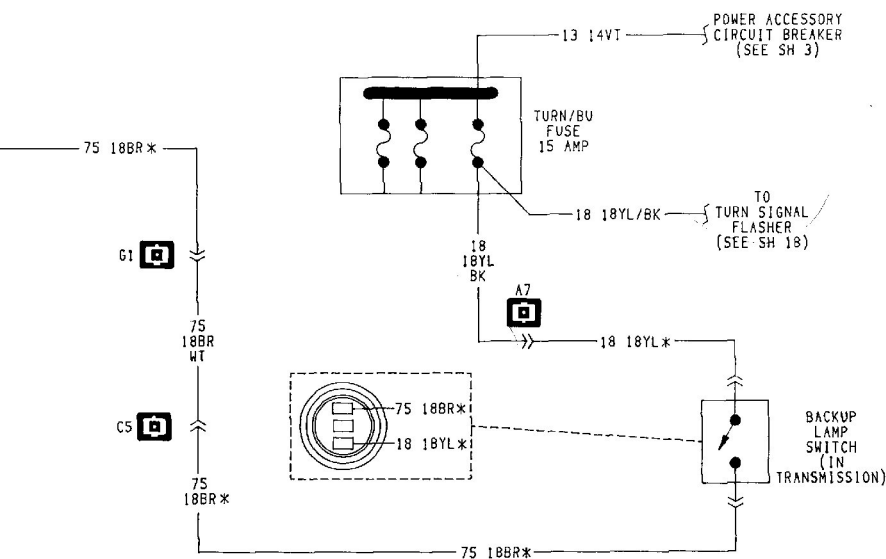




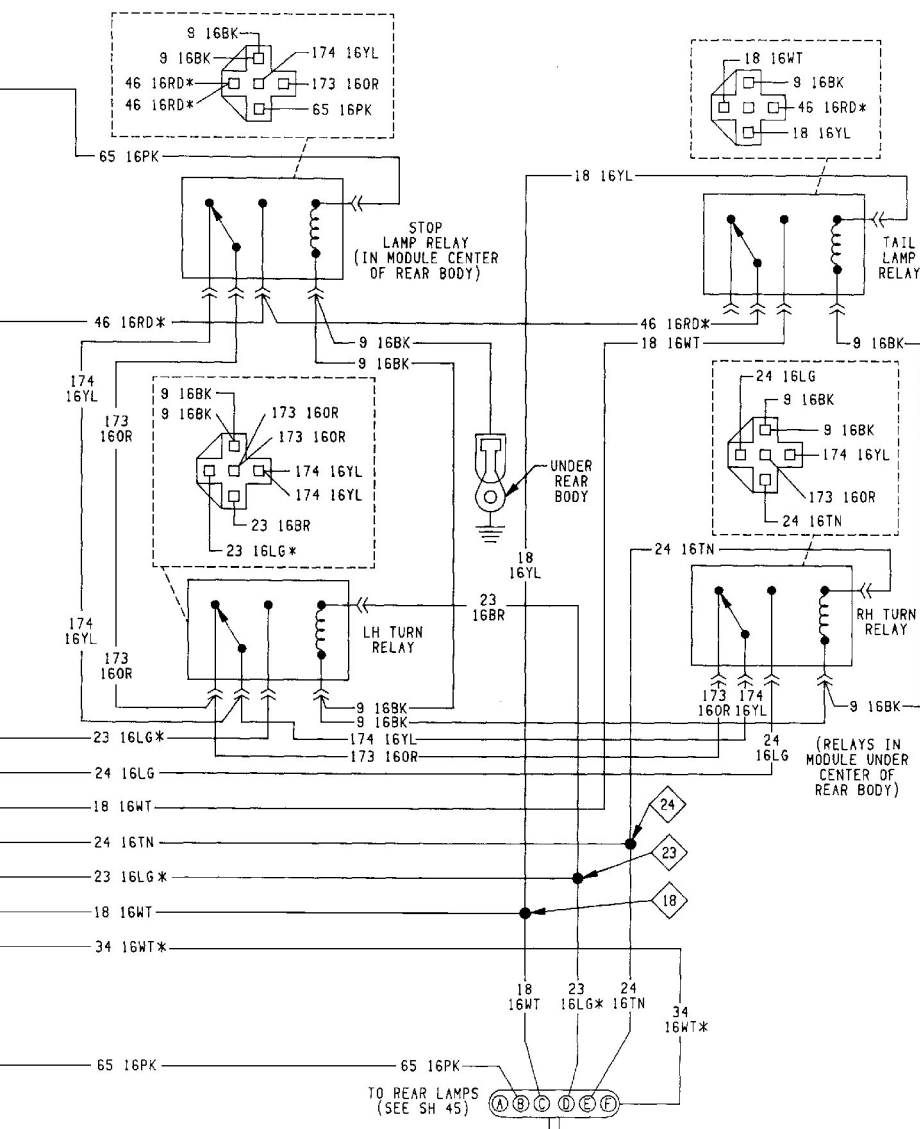


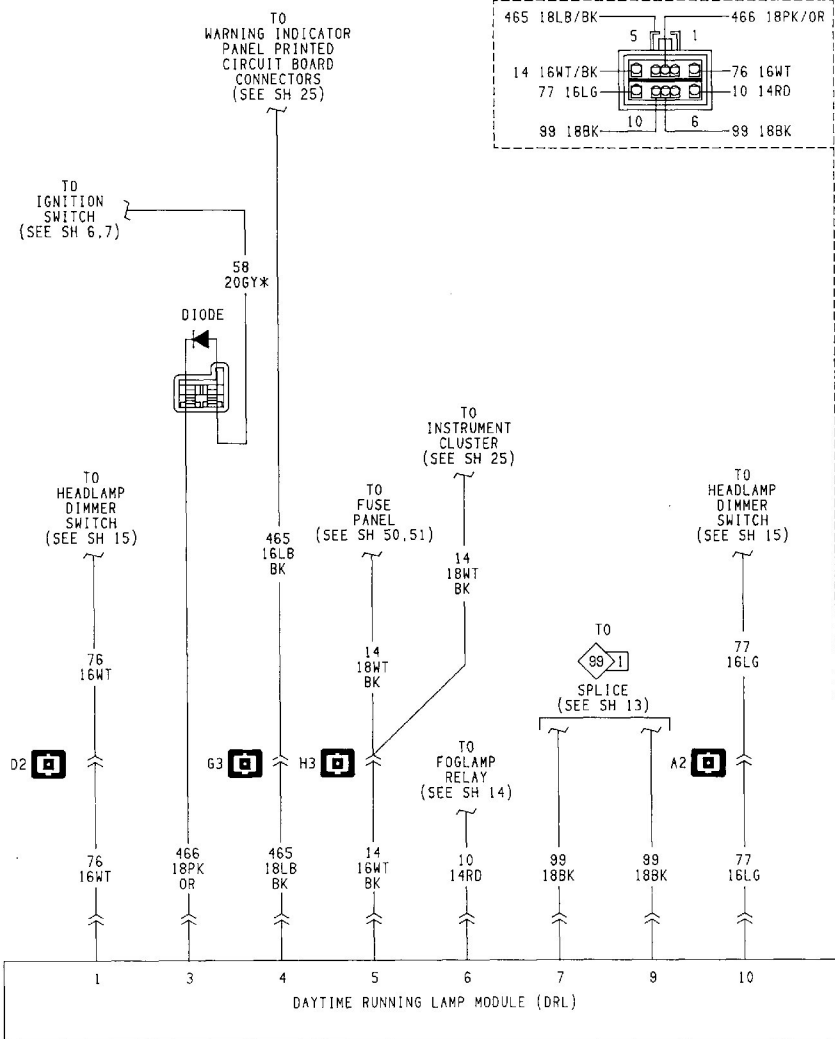


DAYTIME RUNNING LAMP MODULE
SYSTEM (CANADA ONLY)

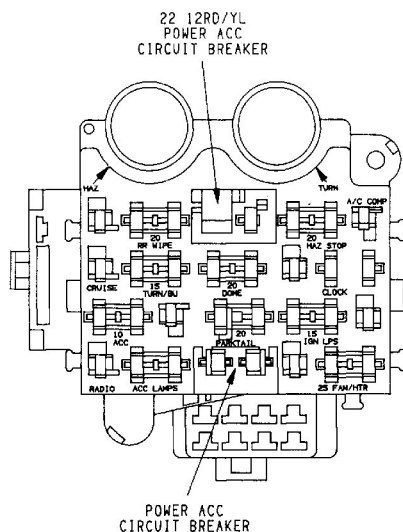

FUSE	AMPS	COLOR
RR WIPE	20 AMP	YELLOW
POWER ACC	30 AMP CIRCUIT BREAKER	
HAZ STOP	20 AMP	YELLOW
WINDSHIELD WIPER	7.5 AMP CIRCUIT BREAKER	
TURN/BU	15 AMP	LIGHT BLUE
DOME	20 AMP	YELLOW
ACC	20 AMP	YELLOW
PARK/TAIL	20 AMP	YELLOW
IGN LPS	15 AMP	BLUE
ACC LPS	3 AMP	TAN
POWER ACC	30 AMP CIRCUIT BREAKER	
FAN/HTR	25 AMP	WHITE

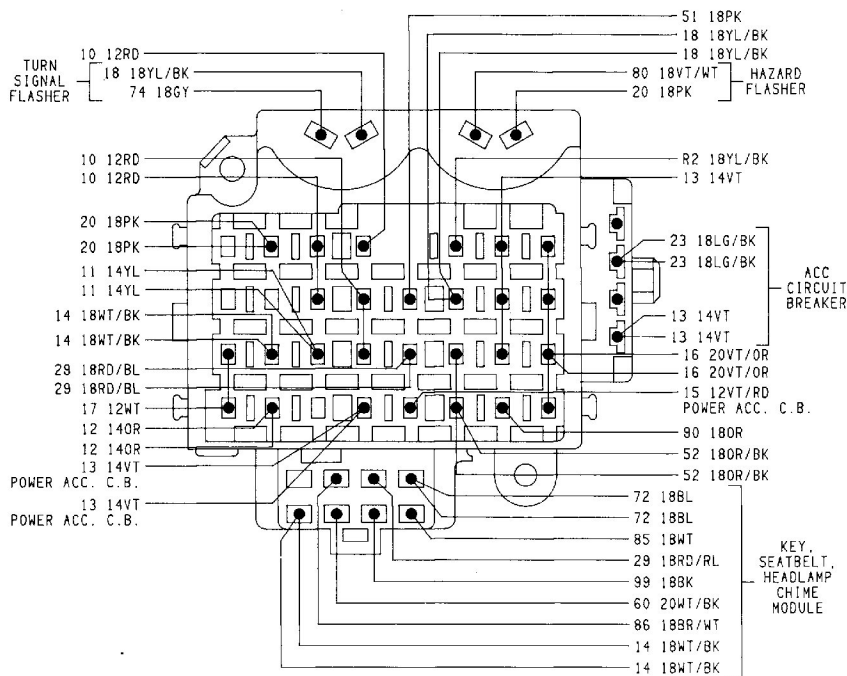


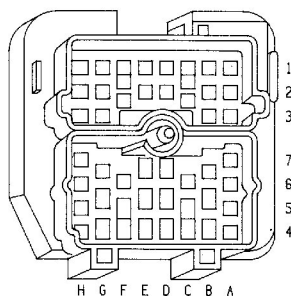


ENGINE COMPARTMENT CIRCUITS		CAV
55 20VT	ENGINE TEMPERATURE SENDER	A4
45 18TN*	WINDSHIELD WIPER PARK	A5
33 24GN	STARTER RELAY FEED	A6
18 18YL*	BACKUP LAMP SWITCH FEED	A7
11 14YL	ALTERNATOR AND IGNITION FEED	B4
32 16DR	A/C CLUTCH FEED	B5
12 14OR	EMISSION SYSTEM FEED	B6
68 12LB	L0 HEATER BLOWER RESISTOR FEED	C4
75 18BR*	BACKUP LAMP FEED	C5
23 18LG*	WINDSHIELD WIPER PARK FEED	C6
10 12RD	IGNITION SWITCH FEED	D4
L99 18BK/OR	COMPASS GROUND	D5
10 12RD	FUSE PANEL FEED	E4
40 12TN	M2 HEATER BLOWER RESISTOR FEED	E5
47 18BL	WINDSHIELD WIPER HI FEED	F4
46 18WT*	WINDSHIELD WIPER LO FEED	F5
51 18PK	UNDERHOOD LAMP FEED	F6
10 12RD	ACCESSORY CIRCUIT BREAKER FEED	G4
41 12LG	M1 HEATER BLOWER RESISTOR FEED	G5
39 12WT*	HI HEATER BLOWER RESISTOR FEED	G6
54 20LB	OIL PRESSURE GAUGE	H4
89 20BK	INTERMITTENT WIPER GROUND	H5
106 20BK/YL	4 WD INDICATOR GROUND	H6



CAV	FRONT LAMP CIRCUITS
A1	79 18BR RIGHT PARK AND TURN FEED
A2	77 16LG HEADLAMP LO BEAM FEED
A2	77 16LG DAYTIME RUNNING LIGHTS(CANADA ONLY)
A3	57 20TN FUEL SENDER
B1	72 18BL PARK LAMPS FEED
B2	31 14GY HORN FEED
B3	58 20GY BRAKE INDICATOR GROUND
B3	58 20GY DAYTIME RUNNING LIGHTS(CANADA ONLY)
C1	78 18GY LH FRONT TURN LAMP FEED
C2	F5 18BL FOG LAMP RELAY COIL FEED
C3	44 18VT/WT WINDSHIELD WASHER PUMP FEED
D1	10 14RD FOG LAMP FEED
D2	76 16WT HEADLAMP HI BEAM FEED
D2	76 16WT DAYTIME RUNNING LIGHTS(CANADA ONLY)
E1	99 12BK GROUND
E2	110 18LG/BK NOT USED
F1	R4 18VT/OR REAR WASHER PUMP FEED
F2	T80 20PK/BL TEMPERATURE SENSOR
F3	T81 20OR/GN TEMPERATURE SENSOR
G1	75 18BR/WT BACKUP LAMP FEED
G2	71 18BL/BK STOP LAMP FEED
G3	465 18LB/BK DAYTIME RUNNING LIGHTS(CANADA ONLY)
G3	76 16WT HEADLAMP FEED
H1	78 18GY LH REAR TURN LAMP FEED
H2	79 18BR RH REAR TURN LAMP FEED
H3	14 16WT/BK DAYTIME RUNNING LIGHTS(CANADA ONLY)

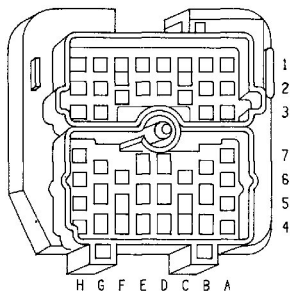



1990

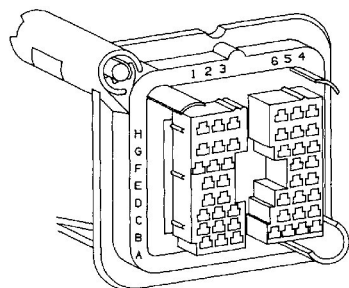

INSTRUMENT PANEL CIRCUITS		CAV
79 18BR	RIGHT PARK AND TURN FEED	A1
77 16LG	HEADLAMP LO BEAM FEED	A2
57 20TN	FUEL SENDER	A3
55 20VT	ENGINE TEMPERATURE SENDER	A4
45 18TN/BK	WINDSHIELD WIPER PARK	A5
33 14GN	STARTER RELAY FEED	A6
18 18YL/BK	BACKUP LAMP SWITCH FEED	A7
72 18BL	RADIO ILLUM. RELAY FEED	B1
72 18BL	CHIME FEED	B1
31 14GY	HORN FEED	B2
58 20GY/BK	BRAKE INDICATOR GROUND	B3
58 20GY/BK	BRAKE INDICATOR GROUND	B3
11 14YL	ALTERNATOR AND IGNITION FEED	B4
32 18OR	A/C CLUTCH FEED	B5
12 14OR	EMISSION SYSTEM FEED	B6
78 18GY/BK	LH FRONT TURN LAMP FEED	C1
F5 18BL/WT	FOG LAMP RELAY COIL FEED	C2
44 18VT/WT	WINDSHIELD WASHER PUMP FEED	C3
68 12LB	LO HEATER BLOWER RESISTOR FEED	C4
75 18BR/WT	BACKUP LAMP FEED	C5
23 18LG/BK	WINDSHIELD WASHER PUMP FEED	C6
10 14RD	FOG LAMP FEED	D1
76 16WT	HEADLAMP HI BEAM FEED	D2
10 12RD	IGNITION SWITCH FEED	D4
L99 18BK/OR	COMPASSS GROUND	D5
99 12BK	GROUND	E1
110 18LG/BK	NOT USED	E2
10 12RD	FUSE PANEL FEED	E4
40 12TN	M2 HEATER BLOWER RESISTOR FEED	E5
R4 18VT/OR	REAR WASHER PUMP FEED	F1
T80 20PK/BL	TEMPERATURE SENSOR	F2
T81 20OR/GN	TEMPERATURE SENSOR	F3
47 18BL/WT	WINDSHIELD WASHER HI FEED	F4
46 18WT/BK	WINDSHIELD WASHER LO FEED	FS
51 18PK	UNDERHOOD LAMP FEED	F6
75 18BR/WT	BACKUP LAMP FEED	G1
71 18LB/BK	STOP LAMP FEED	G2
465 16LB/BK	HI BEAM INDICATOR	G3
10 12RD	ACCESSORY CIRCUIT BREAKER FEED	G4
41 12LG	M1 HEATER BLOWER RESISTOR FEED	G5
39 12WT/BK	M1 HEATER BLOWER RESISTOR FEED	G6
78 18GY/BK	LH REAR TURN LAMP FEED	H1
79 18BR	RH REAR TURN LAMP FEED	H2
14 18WT/BK	IGNITION LAMPS FUSED	H3
14 18WT/BK	REAR DEFOGGER FEED	H3
54 20LB	OIL PRESSURE GAUGE	H4
99 18BK	INTERMITTENT WIPER GROUND	H5
106 20BK/YL	4 WD INDICATOR GROUND	H6

SJ Steering Column 1990

CAV	TURN SIGNAL SWITCH CIRCUITS	
P	110 18LG*	USED ON EXPORT
N	79 18BR	RIGHT TURN-REAR
M	78 18GY/BK	LEFT TURN-REAR
L	74 18GY	TURN SIGNAL FLASHER
K	80 18VT/WT	HAZARD SWITCH
J	79 18BR	RIGHT TURN/FRONT INDICATOR
J	79 18BR	RIGHT TURN/FRONT INDICATOR
H	78 18GY*	LEFT TURN/FRONT INDICATOR
H	78 18GY/BK	LEFT TURN/FRONT INDICATOR
G	128 18OR	HORN SWITCH
F	98 18BK	IGNITION KEY WARNING SWITCH
E	86 18BR	IGNITION KEY WARNING SWITCH
D	52 28OR	NOT USED

 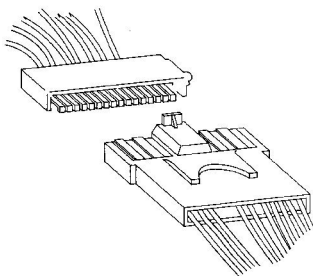

1990